 


Model Numbers LWK73AW-3050,
LWK74AW-3050 and LWK74NW-3050

— Operating Instructions —

Operating Instructions

Model Numbers LWK73AW-3050, LWK74AW-3050 and LWK74NW-3050

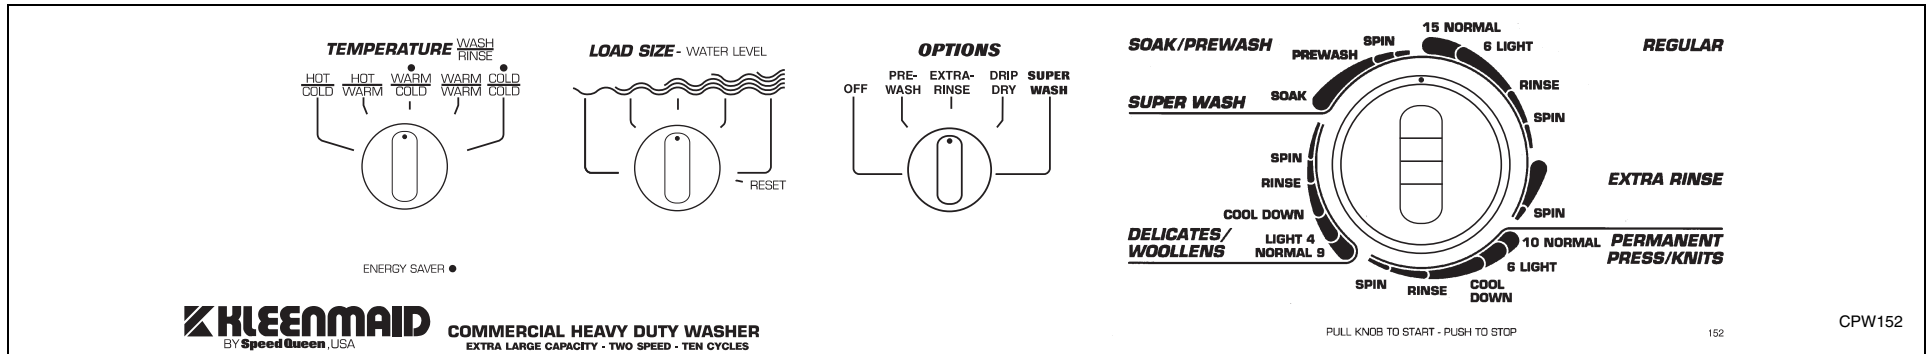

KLEENMAID COMMERCIAL HEAVY DUTY WASHER
BY Speed Queen, USA EXTRA LARGE CAPACITY - TWO SPEED - TEN CYCLES

PULL KNOB TO START - PUSH TO STOP

152

CPW152



WARNING

To reduce the risk of fire, electric shock, serious injury or death to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in the Use and Care Guide before operating your washer.

W018E

Determine Proper Cycle

REGULAR Cycle

Use for sturdy items, like play or work clothes, towels, T-shirts, etc. The wash time selection will depend on the type of fabric and the amount of soil. For the best results when cleaning heavily soiled items, use a longer wash time (15 minutes maximum). Lightly soiled items require less wash time.

PERMANENT PRESS/KNITS Cycle

Use for permanent press items and synthetics. The wash time selection will depend upon the type of fabric and amount of soil.

The PERMANENT PRESS/KNITS cycle automatically cools the temperature of the fibres before the spin. After the wash, the agitation stops, the washtub spins slowly, partially drains and then stops. Cold water will then be automatically added to the washtub until the proper water level is reached. This happens one or two times, depending on the size of the load and type of drain connection. When the COOL DOWN is complete, the washer will pause shortly before continuing the cycle.

SOAK/PREWASH (With OPTIONS Switch OFF)

Use for heavily soiled or stained clothing. Turn timer knob to the beginning of the SOAK/PREWASH cycle. Pull timer knob out to start the water fill. Add detergent to the washtub, then place the load into the tub. Close lid. After fill is completed, agitation will begin. This cycle has alternate periods of agitation and soaking. After the soak/agitation period is over the washer will go into an infinite pause and remain there. Do not leave clothes sit in washer overnight. To complete the cycle, manually advance the timer to spin. After spin, select appropriate cycle and pull timer out to start the water fill. Once the water mixes with the clothes, add detergent.

SOAK/PREWASH (Using the OPTIONS Switch)

See Options on following page.

DELICATES/WOOLLENS Cycle

Use this cycle to wash delicates and machine washable woollens. A full tub of water is recommended (even for small loads) to allow the delicate items to move freely through the water. More water helps reduce fabric wear, wrinkling, and provides for a clean wash. Both wash and spin actions are at slow speed.

SUPER WASH

Use this cycle for very heavily soiled or stained clothing. This cycle will go through the Soak/Prewash, Regular and Extra Rinse cycles. The OPTION SWITCH MUST BE ON SUPER WASH FOR THIS CYCLE.

EXTRA RINSE

Use this cycle for items you would like to have rinsed only. The washtub will fill to the level you have selected on the LOAD SIZE control. Washer will agitate for five minutes, pause shortly and spin.

 
To Wash Clothes

IMPORTANT: Before using your new washer, make sure the washer cord is plugged into a 240 Volt electrical outlet that has the proper grounding and polarity. Make sure the washer hoses are connected to the hot and cold water faucets, and that the faucets are turned on. Be sure the drain hose is inserted into a drain and is not kinked. See the **INSTALLATION INSTRUCTIONS** for details of proper washer installation.

IMPORTANT: Prior to first wash, use an all purpose cleaner, or a detergent and water solution, and a damp cloth to remove shipping dust from inside of washtub.


IMPORTANT: Remove all sharp objects from laundry to avoid tears and rips to items during normal machine operation.

1. Get the clothes ready for washing. Empty pockets and cuffs. Sort items into separate loads. Pretreat stains and heavily soiled areas.

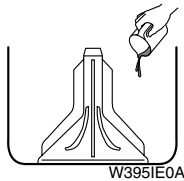


2. Measure and add detergent to the washtub.

 3. Add clothes loosely into the washtub.

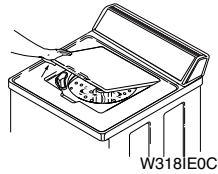

4. Close the loading door.

 
5. Set WASH/RINSE temperatures.

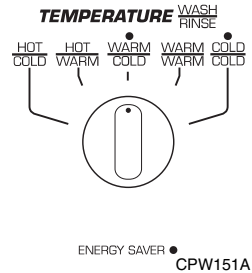

NOTE: The washer will provide a cold rinse in all **TEMPERATURE** settings except in positions marked **HOT** wash **WARM** rinse or **WARM** wash **WARM** rinse. **DO NOT** use a warm rinse with permanent press or other synthetic fabrics. A warm rinse can cause wrinkling in some garments. Cold rinses will save you money and energy and will help reduce wrinkling in permanent press and synthetics.


The **ENERGY SAVER** settings, marked with a dot (•), show which temperature settings will use the least energy.

 6. Set **LOAD SIZE (WATER LEVEL)** control. Use **RESET** if agitation has started and more water is needed.

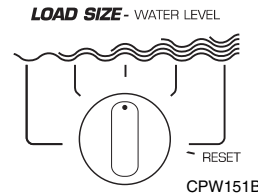

IMPORTANT: Holding the **LOAD SIZE (WATER LEVEL)** control in the **RESET** position can cause the washer to flood.

 
7. Select the cycle according to the type of fabric being washed. Push the timer knob in and turn clockwise to the desired cycle and wash time.

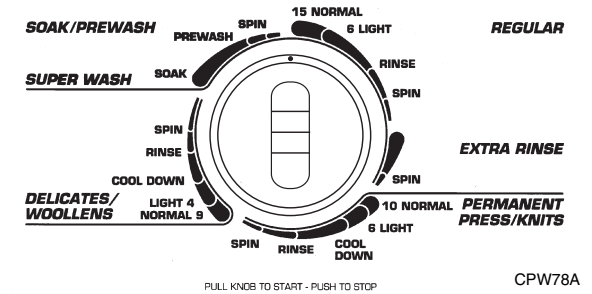

8. Pull the timer knob out to start the water fill. Agitation will begin when the water reaches the level you selected.

The washer will stop (pause) shortly before the wash and rinse spins. Do not turn the timer through these pauses. They are part of the cycle.

 Options

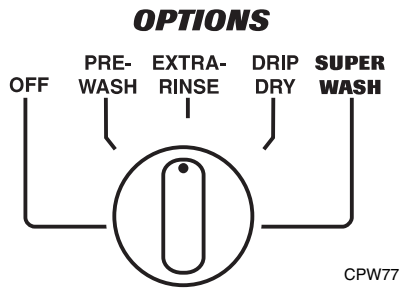

PREWASH

Use for heavily soiled or stained clothing. When the PREWASH setting is selected, the washer will automatically go through the SOAK/PREWASH and the REGULAR cycle. First, add detergent into the washtub, then place the wash load into the tub. Fill softener dispenser in agitator with liquid detergent diluted with water.

IMPORTANT: Dispenser must be cleaned before and after using detergent.

EXTRA RINSE

Use for heavy clothing such as denim, towels, etc., where an additional deep rinse may be desired. When the EXTRA RINSE setting is selected, the washer will automatically go through the REGULAR cycle and a second deep RINSE cycle.

DRIP DRY

Use this setting for clothing you want to remove from the washer very wet. In this setting the washer will drain the water out but not spin.

If certain items need to be spun out, return the OPTIONS switch to the OFF position and the cycle will progress through the final spin. There is no need to advance the timer knob.

SUPER WASH

This setting is a combination of the PREWASH and the EXTRA RINSE cycles. When the SUPER WASH setting is selected, the washer will automatically go through the SOAK/PREWASH, REGULAR, and EXTRA RINSE cycles. First, add detergent into the wash tub, then place the wash load into the wash tub. Fill softener dispenser in agitator with liquid detergent diluted with water.

