


ELECTRIC HOB
OPERATING AND
INSTALLATION INSTRUCTIONS
CH600SW
CH600SX

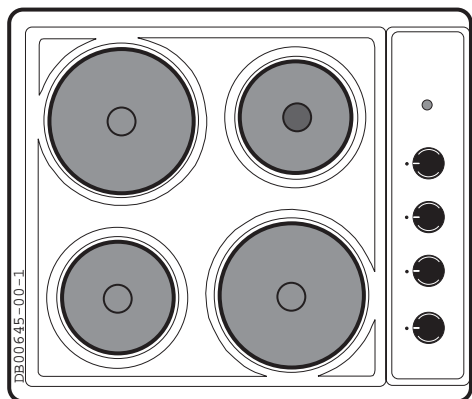


 **KLEENMAID**

MANUFACTURED BY *Brandt*

RATING PLATE:

FOR THE INSTALLER

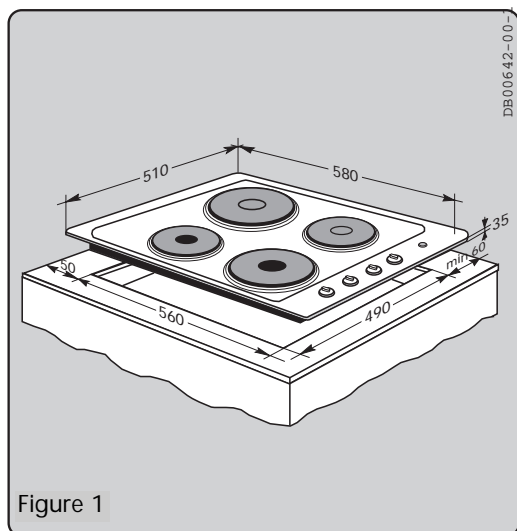

INTO THE WORKTOP

All our cooking hobs are designed to be fitted into worktops, whether made of wood or laminated plastic, provided it is of a heat resistant surface. For building in it is sufficient to make a hole in the worktop as shown in Fig. 1 (560 mm x 490 mm) keeping a minimum distance of 40/50 mm from the rear and from the right wall and 40 mm from the side walls to avoid damage by heat.



It is necessary to place a shelf beneath the hob top, at a distance of at least 90 mm below that of the work surface.

Installation:

If there is a false floor under the hob, it has to be removable for installation purposes. Insert hob into the worktop opening from above. Make sure that the hob connection cable is directed to the rear.

POSITION OF TENSIONING BRACKETS

Using 4 brackets, tension hob against the worktop in such a way that the entire seal fits tightly to the worktop.

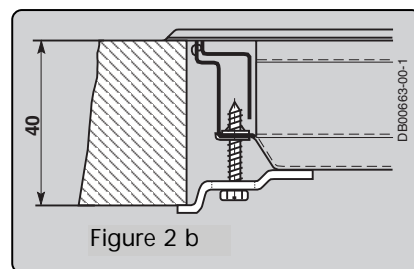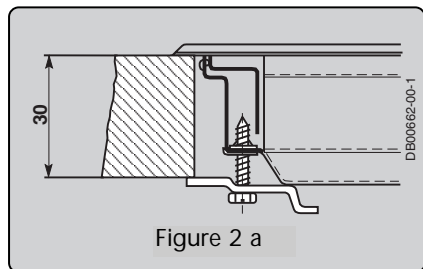

The present hob has 4 tensioning brackets with fastening claws. For their positions see figure below.

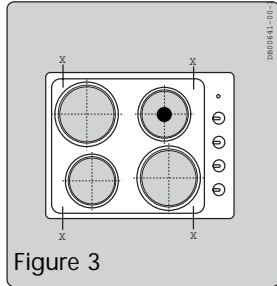


Figure 3

Warning:

For safety purposes, the delivered tensioning brackets must be used. The contact protection is guaranteed only after installation!


Do not use the hob before it has been built-in. The surfaces of heating and cooking appliances become hot when in use. Therefore keep children away. Be careful when preparing food in hot fat or oil because overheated fat or oil could catch fire easily! Do not leave the appliance unattended when preparing food with fat or oil (e.g. chips)!

The mains cables of other appliances (e.g. hand mixers) must not get into contact with the hot hob surface.

CONNECTION TO MAINS

The following cable types can be used for connecting to the mains:

connection type	cable type
400 V 2 N ~ (two-phase)	H 05 RR F4G 1,5 (4 x 1,5 mm ²) or H 05 VV F4G 1,5 (4 x 1,5 mm ²)
220-240 V ~ (single-phase)	H 05 RR F3G 2,5 (3 x 2,5 mm ²) or H 05 VV F3G 2,5 (3 x 2,5 mm ²)

The line marked green and yellow (PE) is to be connected to the terminal showing the protective conductor symbol  !

Connect the mains cable in the appliance as follows:

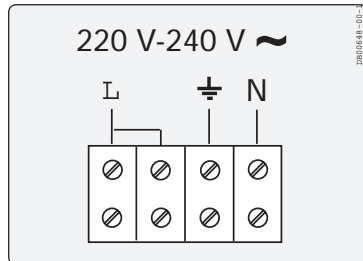


Figure 4

Depending on the power and type of connection, the appliance has to be fuse - protected by the installation of the house as follows:


The electric installation of the house must provide an all-pole isolator with a minimum contact gap of 3 mm (e.g. line safety switch, circuit-breaker, contactor).

If the appliance is provided with a superposed residual-current-operated breaker, this breaker has to be sensitive to pulsed currents.

connection type	power as per nameplate	fuse
220-240 V ~	5,0 kW	1 x 16 A
220-240 V ~	5,57,0 kW	1 x 25 A

The protection against accidental contact is only effective after the appliance has been completely built-in.

CHOOSING THE RIGHT POTS AND PANS

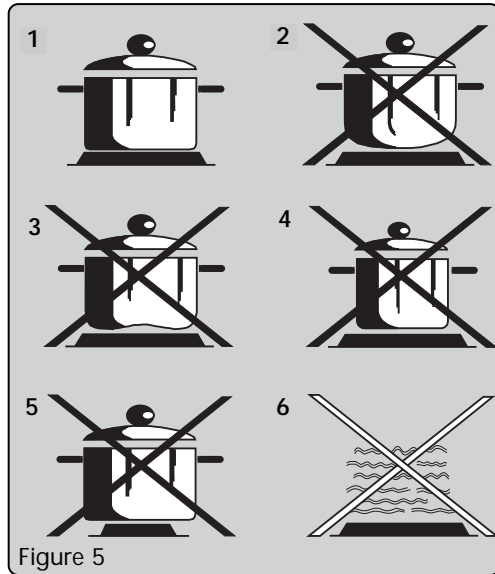

To obtain good cooking results, it is important to use high-quality pots with an even bottom suited for electric hobs. Make sure that the diameter corresponds to the size of the hotplate (1).

Pots with an uneven bottom (2 + 3) consume unnecessarily more energy, cause overheating of the hotplate and thus reduce its lifetime.

Too small pots (4) cause a considerable loss of heat = waste of energy. Besides, spilt food might get the hotplate dirty and encrusted.

If the pot is too big for the hotplate, the bottom of the pot might get damaged (5).

Hotplates turned on without a pot (6) can overheat so much that their surfaces develop cracks, which might lead to total destruction of the plate.

Size relation of hotplate and pots:

hotplate	145 mm Ø	180 mm Ø
bottom of pot	160 mm Ø	200 mm Ø

CLEANING

Use mild cleaning agents only. Do not scour or scratch. Do not use steam cleaners. They could cause water to enter the appliance, which is a safety risk.

NAMEPLATE

Since the nameplate on your appliance with all the important data and information is no more accessible after building in, we have enclosed a second nameplate. It is self-adhesive. Please stick onto the installation instructions to make it available whenever you need the appliance data.

If the power cord of the appliance is damaged, it has to be replaced by a qualified person only.

WARRANTY AND SERVICE

DOMESTIC WARRANTY - Full Five Year Warranty

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during the first five years of ownership as the original purchaser of the Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

COMMERCIAL WARRANTY - Full One Year Warranty

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during your first one year of ownership as the original purchaser of the Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent, will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent of the Agent's travelling cost to and from the Purchaser's home.

WHAT THESE WARRANTIES DO NOT COVER

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes, but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for any consequential damages from any malfunction.

WARRANTY REGISTRATION

Please complete the enclosed warranty card and retain it with your proof of purchase.

SERVICE ASSISTANCE

To assist you when phoning our Customer Call Centre number to arrange for a service call please have the following details ready.

Model Number:

Date of Purchase:

Kleenmaid Store purchased from:

Date of installation:

***KLEENMAID APPLIANCE SERVICE & SPARE PARTS
CONTACT NUMBER 1300 652 100***

Congratulations on the purchase of your new appliance. This appliance has been designed and manufactured to give you years of reliable performance. For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service calls.

Once installation is complete, read this booklet carefully and get to know the controls and the features of your new appliance.

For appliance please phone

1300 652 100

Kleenmaid St George Store

131308

We reserve the right to alter the specifications with no influence on the operation of the appliance. This instruction manual cannot be reason for claim.

Other products in Kleenmaid St George
range of world's best appliances:

Washers

Dryers

Dishwashers

Ovens

Cooktops

Rangehoods
Sinks

Waste Disposal

Taps

Cookware

Refrigerators

Freezers

Vacuum Cleaners

**For sales information on the full range of quality kitchen
and laundry appliances, phone 13 13 08.**

For service related enquires, phone 1300 652 100