

CERAMIC HOB

OPERATING AND INSTALLATIONS INSTRUCTIONS

CH 600 CM

 KLEENMAID

MANUFACTURED BY **Brandt**

9961 8572 09/00

DEAR CUSTOMER,

Thank you for choosing one of our appliances which has been carefully designed and built by our Specialist staff and thoroughly tested to satisfy all your cooking requirements.

We suggest that you read this Instruction Booklet so that you will understand fully how to operate the appliances.

Please keep the booklet handy. You may wish to refer to it at a later date

CONTENTS

INSTALLATION	PAGE	3
DESCRIPTION OF THE APPLIANCE	PAGE	3
CONTROLS AND LIGHTS	PAGE	3
HOW TO USE THE HOB	PAGE	4
CORRECT USE OF HOB	PAGE	4
CLEANING THE HOB	PAGE	5
BURNT ON SPILLAGE	PAGE	5
DO'S AND DONT'S	PAGE	5
FOR THE INSTALLER	PAGE	6
MOUNTING THE HOB	PAGE	6
ELECTRICAL CONNECTION	PAGE	7


INSTALLATION

The hob must be installed in accordance with the installation Instructions contained in this booklet. Connection to the electricity supply must be made by a competent electrician to a suitable double pole switch.

WARNING: THIS APPLIANCE MUST BE EARTHED

BEFORE USE:

Please ensure that all packing has been removed from the appliance before switching on.

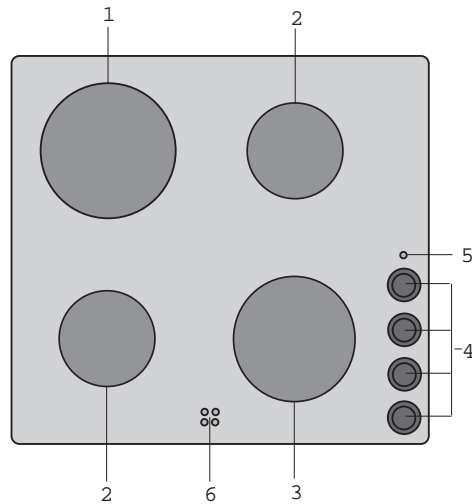

MODEL: CH 600CM

Cooking area: 1 Standard Ø 210 mm

Cooking areas: 2 Standard Ø 145 mm

Cooking area: 3 Standard Ø 180 mm

DESCRIPTION OF THE APPLIANCE

COOKING AREAS

The hobs are supplied with four elements.

CONTROLS AND LIGHTS

The elements are controlled by using the knobs 4 and can be adjusted from setting 1 to 9.

Mains light 5 will light when any one of the cooking areas are in use. HOT warning lights 6 will light indicating the hob glass is hot around the cooking area chosen and will remain lit until the glass has cooled to a safe temperature.

HOW TO USE THE HOB

The temperature of the cooking areas can be adjusted by turning the relevant control knob to any one of the 9 positions.

The maximum heat setting is number 9, the minimum setting number is 1 (Fig. 3). When any of the control knobs are turned the mains light will light and when the glass is hot one of the HOT warning lights will light and stay lit until the glass has cooled.


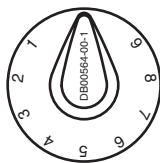


Fig. 3

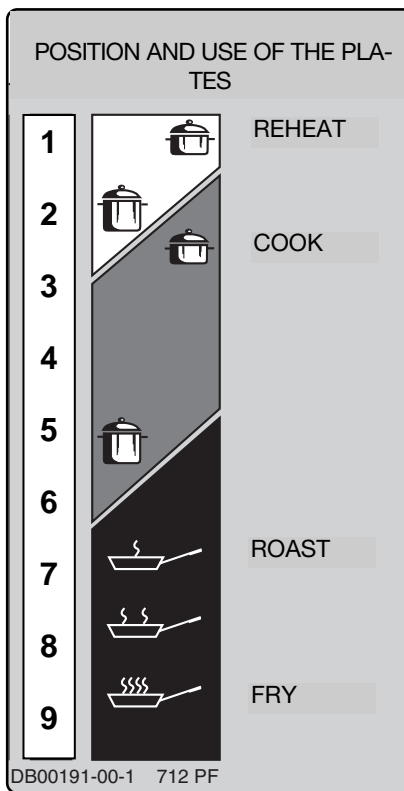

CORRECT USE OF HOB

To obtain the best results from the hob please observe the following points. (Fig 4)


- The pan base must be completely flat.
- Avoid placing wet pans on the cooking area.
- The diameter of the base of the pan must be the same as that of the cooking area or slightly larger but never smaller.
- Do not let the elements function with out a pan placed upon them

Remember

It is far more economical to use pans with close fitting lids.

Special notes when Frying

For safety, when deep frying, fill the pan only onethird full of fat or oil. DO NOT COVER THE PAN WITH A LID AND DO NOT LEAVE UNATTENDED. In the unfortunate event of a fat/oil fire, switch off at the electricity supply and cover the pan with a lid or damp cloth to smother the flames. If in doubt call the Fire Brigade.

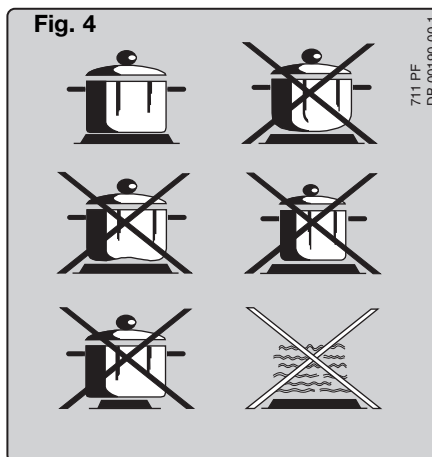

CLEANING THE HOB

Any spillage should be wiped from the ceramic glass as soon as possible, when the cooking areas are cool enough to do so, using a damp cloth. Spillages that are left to dry can burn onto the glass, making cleaning more difficult. Cleaning must be carried out using a clean cloth and a suitable cream cleaner.

To keep the ceramic glass in good condition frequently clean using a ceramic glass cleaner.

DO NOT under any circumstances scrape the glass with metallic utensils at this could scratch or damage the surface.

DO NOT use any cleaning products which contain abrasives or products supplied for oven cleaning.

NOTE: INCORRECT CLEANING CAN DAMAGE THE SURFACE OF THE CERAMIC GLASS AND CAUSE DETERIORATION OF THE AESTHETIC APPEARANCE OF THE HOB.

BURNT ON SPILLAGE

If you should note a discolouration of the ceramic glass (i.e. a light brown hue appearing on the cooking area) this indicates that spillage has become burnt on to the surface of the glass. This allows a very high temperature to be produced on the surface of the glass as a direct consequence of the poor heat dissipation between the base of the pan and the ceramic glass, producing a brown film on the surface. If discolouration is noted you should clean the ceramic glass immediately using a ceramic glass cleaning product as previously mentioned, or rubbing the area with 1/2 a lemon.

IMPORTANT

If the foods containing sugar i.e. jam, preserves etc. are spilt on the surface of the glass, it must be removed immediately and whilst still hot, as failure to do so will permanently damage the ceramic glass.

WARNING

The appliance gets very hot around the cooking area. It is most important that children

are not left alone in the kitchen when the cooking appliance is in use and all normal safety precautions should be observed.

IF YOUR HOB SHOULD FAIL TO OPERATE

Before calling for assistance please check the following points.

1. Check that the mains isolation switch is turned on.
2. Check that the control knob is turned to the correct position.
3. Check that the house fuse or RCB has not tripped.

FOR YOUR SAFETY

The product should only be used for its intended purpose which is for the cooking of domestic foodstuffs.

Under no circumstances should any external covers be removed for servicing or maintenance except by suitably qualified personnel.

DO'S AND DON'TS

- DO** read the User Instructions carefully before using the hob for the first time.
- DO** ensure that pan handles are turned to a safe position
- DO** use pans with lids.
- DO** follow the special instructions given on deep frying.
- DO** clean the hob regularly.
- DO** remove spills as soon as they occur.
- DO NOT** allow children near the hob when in use.
- DO NOT** use small pans on large plates.
- DO NOT** overfill pans.
- DO NOT** clean the hob without first turning off the electricity supply.
- DO NOT** use abrasive cleaners or powders that will scratch the surface of the ceramic glass.
- DO NOT** attempt to repair the internal workings of the hob.

Ud 0870 600 1301

FOR THE INSTALLER




INSTALLATION INTO THE WORKTOP

All our cooking hobs are designed to be fitted into worktops, whether made of wood or laminated plastic, provided it is of a heat resistant surface. For building in it is sufficient to make a hole in the worktop as shown in Fig.5 (560mm x 490) keeping a minimum distance of 40/50 mm from the rear wall to avoid damage by heat.

If a horizontal partition is fitted underneath the hob, it should be located at a minimum distance of 90 mm from the top of the work surface.

Mount the two brackets on the front and on the rear side of the cut out. Take care, that the brackets are mounted symmetrically (see Fig 5 and 6).

Finally click-in the appliance in the cut out. (see Fig 7)

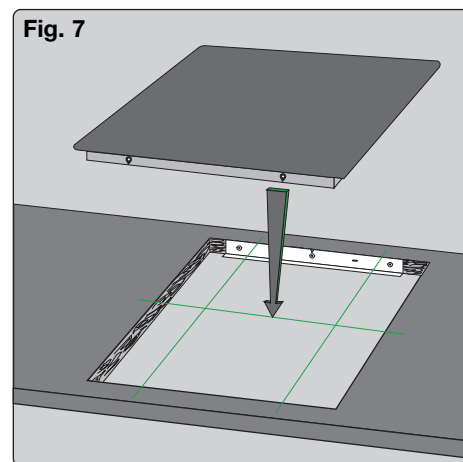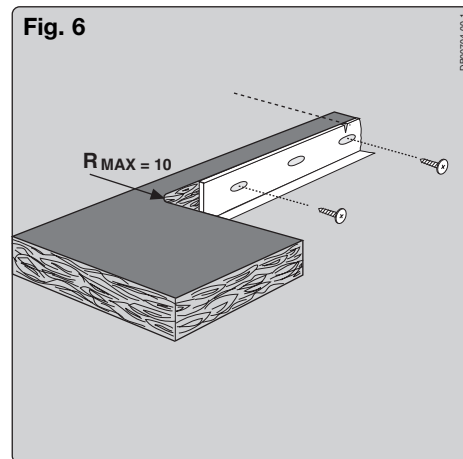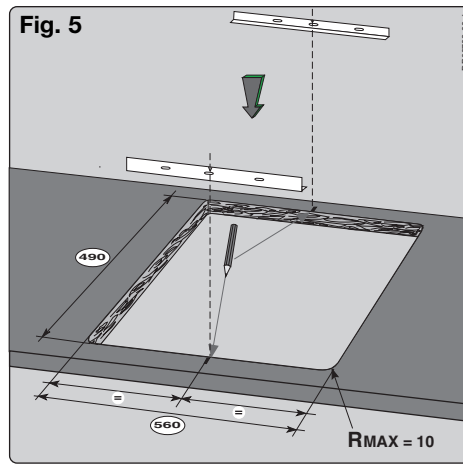

ELECTRICAL CONNECTION

All electrical wiring must be in compliance with the appropriate I.E.E. and local Electrical Board regulations and carried out by a qualified electrician.

The hob must be supplied via a suitable double pole isolating switch, placed in a readily accessible position adjacent to the hob.

WARNING: THIS APPLIANCE MUST BE EARTHED

The hob is fitted with a data plate attached to the base, indicating the rated input and voltage at which the hob must operate. BEFORE CONNECTING AND INSTALLING THIS HOB THE ELECTRICITY MUST BE TURNED OFF AT THE MAINS. The electrical connection to the hob must be connected to the terminal block (Fig.8) with a cable of the correct rating (see data plate) by a qualified electrician. Access to the mains terminal connection block is by removing the small cover situated on the base of the hob.

THE CONNECTIONS ARE AS FOLLOWS:

Live connection - Terminal marked **L**

Neutral connection - Terminal marked **N**


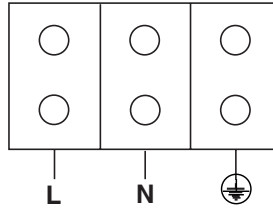
Earth connection - Terminal marked with the earth symbol 

Fig. 8



This appliance complies with the radio interference requirements of EEC Directive 76/889/EEC.

Hob technical data

Operating voltage230 V~ 50 Hz 32 Amps

Total power consumption6500 W

Dimensions of cut-out.....Width 560 mm
.....Depth 490 mm

Max. space required under worktop64 mm

Overall dimensions under worktop.....Width 555 mm
.....Depth 485 mm

Overall dimensions above worktopWidth 580 mm
.....Depth 510 mm

Weightabout 11 kg

ManufacturerN°419

Warranty and Service

DOMESTIC WARRANTY - Full Five Year Warranty

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during the first five years of ownership as the original purchaser of the Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

COMMERCIAL WARRANTY - Full One Year Warranty

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during your first one year of ownership as the original purchaser of the Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent, will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent of the Agent's travelling cost to and from the Purchaser's home.

WHAT THESE WARRANTIES DO NOT COVER

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes, but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for any consequential damages from any malfunction.

WARRANTY DOES NOT COVER REPLACEMENT OF LIGHT GLOBES OR GLASS BREAKAGE DUE TO IMPACT

In case of fractured glass do not use your appliance.

WARRANTY REGISTRATION

Please complete the enclosed warranty card and retain with your receipt of purchase.

SERVICE ASSISTANCE

To assist you when phoning our Kleenmaid Appliance Service to arrange a service call please have the following details ready.

Model Number:

Date of Purchase:

Kleenmaid Store purchased from:

Date of installation:

**KLEENMAID APPLIANCE SERVICE & SPARE PARTS CONTACT
NUMBER : 1300 652 100**

PLEASE NOTE: ALL SERVICING SHALL BE CARRIED OUT ONLY BY AUTHORISED PERSONNEL.

Congratulations on the purchase of your new appliance. This appliance has been designed and manufactured to give you years of reliable performance. For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service calls.

Once installation is complete, read this booklet carefully and get to know the controls and the features of your new appliance.

For appliance please phone

1300 652 100

Kleenmaid St George Store

131308

We reserve the right to alter the specifications with no influence on the operation of the appliance. This instruction manual cannot be reason for claim.

Other products in Kleenmaid St George
range of world's best appliances:

Washers

Dryers

Dishwashers

Ovens

Cooktops

Rangehoods

Sinks

Waste Disposals

Taps

Cookware

Refrigerators

Freezers

Vacuum Cleaners

**For sales information on the full range of quality kitchen and laundry
appliances, phone 13 13 08.**

For service related enquires, phone 1300 652 100