




CM02X - Descaling your machine

After use and time your Kleenmaid coffee machine will need to be descaled to remove any mineral deposits present in the water circuit. How often you need to descale your machine is determined by the frequency of use and the hardness of the water you are using. As a reminder the machine is programmed to notify you every 3 months via the display screen with the message '**DESCALING**'.

**** DO NOT USE CITRUS BASED PRODUCTS TO DESCALE THE CM02X OR CM01X ****

To descale the machine

1. Open the machine by lifting the handle of the drawer and pulling it outward.
2. Empty the water tank.
3. Dissolve two descale tablets in 1 litre of water
(Descal tablets now available from EDIS : SPCM03038000 – bag of 2)
4. Pour the mixture into the water reservoir
5. Close up and switch on the machine.
6. Press the hot water  button. Purge about 1½ cups of the contents of the water container through the steam distributor and the filter head without coffee.
7. Switch off the machine and allow the solution to act for approximately fifteen minutes.
8. Switch the machine back on and drain the remaining water in the container through the filter head and steam distributor. Continue to drain until the machine stops pumping.
9. Empty the remaining water from the container and wash it thoroughly.
10. Fill the container with fresh water and empty it through the steam distributor and filter head again without coffee.
11. Once this is complete, press and hold the **Grind Coffee**  & **Type of Coffee**  buttons until the '**DESCALING**' message disappears.