

IB31D

Induction Cooktop

Stainless Steel Surround

Appliance Operation Manual

INCLUDING INSTALLATION AND CLEANING

St George

WELCOME TO ST GEORGE

St George is a proud Australian company with a heritage of innovation and quality.

Our success extends to domestic and overseas markets, confirming our reputation at the forefront of appliance excellence.

The elegant simplicity and high performance features of St George designs, will remain contemporary in many years to come.

For the user How induction works

- Congratulations on choosing an induction hob, a system which is revolutionising cooking. With your hob, because the heat required to cook the food is produced directly in the interior of the pan, the ceramic top does not become as hot as a conventional ceramic cooktop. However when using high temperature cooking, radiated heat from the pan can cause the cooking surface to become hot enough to burn.

Compared to a standard hob your induction hob is:

MORE ECONOMICAL: when a pan is removed the heating zone switches off instantly

FASTER: output of 2800w available instantly on the heating zone.

MORE PRECISE: The hob reacts instantly to the controls


SAFER: the temperature of the ceramic top remains low


- Operating principle:

The “induction” currents instantly heat the pan* which transfers its heat to the food it contains.

*Enamelled steel, cast iron or stainless steel pans suitable for induction cooking.

	USES	
1/2	VERY LOW	melting butter, chocolate, keeping warm sauces, custards...
3	SLOW	rice pudding reheating
4/5	SIMMER	purée, pulses, soups, jam, compotes
6	MEDIUM	pasta, boiled rice, boiling milk
7/8	HIGH	steaks, fast frying, pancakes
9	VERY HIGH	deep frying, fast boiling

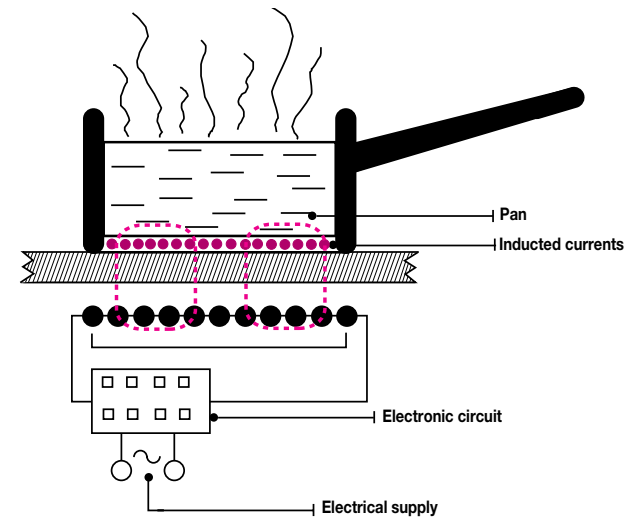

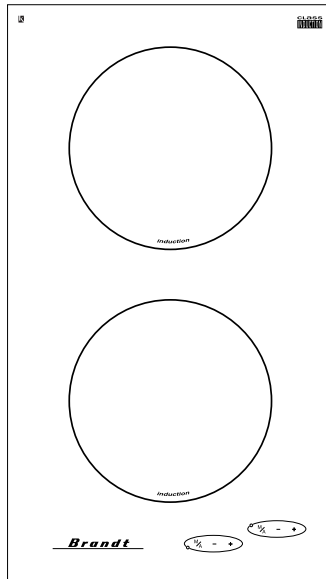

3

Display showing (1 to 9) the power level set for each heating zone.



Symbol indicating the heating zone on the hob
Example shown: front zone

-

+

Power level adjustment + or - for each heating zone.

M/A

On / off touch control for each heating zone

■ Turning on a heating zone

Locate the touch controls on the keypad which corresponds to the cooking zone on which you have placed your pan.

- Press the $\frac{M}{A}$ touch control.

The power level display shows 0, the hob is switched on.

- Set the power level required by pressing the + touch control.

Once you have pressed the $\frac{M}{A}$ touch control, if you do not select a power level, the instruction will be cancelled automatically after 10 seconds.

- Adjust the power level during cooking

You can adjust the power level from 1 to 9 at any time during cooking using the + or - touch controls.

■ Turning off a heating zone

- Press the $\frac{M}{A}$ touch control of the zone concerned.

■ Using 2 cooking zones simultaneously

These two zones have a total of 2800 W of power available, distributed automatically between the front and rear zones.

This means that when one zone is being used at maximum, the power of the other is automatically reduced.

The most recent instruction always takes priority.

Check regularly that there are no objects (tea towel, paper, etc.) which might block the air inlet located below your hob (see fitting P. 12).

- **“Electronic” safety feature**

A sensor constantly monitors the temperature of the electronic circuits. If the temperature rises too high the power supplied by the hob will be reduced.

- **“Empty pan” safety feature**

Each heating zone is fitted with a sensor which constantly monitors its surface temperature, so no more danger of overheating caused by empty pans.

- **Detection of an object or a pan on a heating zone**

A small object such as a fork, a spoon or even a ring left on the hob is not detected as a saucepan.

The display flashes and no heating power is produced.

The safety system acts in the same way when it detects a pan which is not suitable for cooking by induction.

IMPORTANT: If an oven is located under your hob (see installation options) the thermal safety devices on the hob will prevent its simultaneous use when the oven is in pyrolysis mode.

*For the attention of wearers of pacemakers
and active implants:*

The functioning of the hob is in conformity with current standards on electro-magnetic interference.

Your induction hob also fully complies with the legal requirements (EC directives 89/336/EEC). It has been designed not to interfere with the operation of other electrical appliances as long as these comply with the same legislation.

Your induction hob generates magnetic fields in its immediate area.

So that there is no interference between your hob and a pacemaker, the latter must be designed in conformity with the relevant regulations.

In this respect, we can only guarantee the conformity of our own product.

Insofar as the conformity of the pacemaker or any incompatibility is concerned, you should consult its manufacturer or your doctor.

■ Precautions for use

- The ceramic surface is very strong, however, it is not unbreakable: do not drop pans onto it.
- Saucepans with damaged bases may trap and transfer materials which could cause staining or scratching of the hob.
- Do not drag saucepans across the hob surface as in the long term this will damage the design on the ceramic top.

These faults, which do not prevent operation or use of the hob, are not covered by the guarantee.

The hob must not be used as a storage area.

- Do not store **CLEANING** products or any products which might be **INFLAMMABLE** in the unit located under your hob.
- When plugging electrical appliances into a socket nearby, make sure that the power cable does not come into contact with the heating zones.

**If a crack appears in the ceramic top,
disconnect the appliance from
the power supply immediately by removing
the fuses or activating the circuit breaker.
Do not use any part of the hob until the ceramic top has been
replaced**

■ Advice on cooking

- Do not leave an empty pan on a heating zone.
- The pan should be centred on the heating zone.
- Never heat up an unopened tin, it may explode; this advice applies to all cooking systems.
- When you use a pan with a non-stick lining (Teflon type) to cook with no fat or very little, preheat it at setting **6** for a moment.
- You are advised not to place metal cooking utensils, cutlery, knives and similar metal objects on the hob. They may become hot if they are near a functioning cooking zone.
- Using a pan which is smaller than the size of the cooking zone indicated on the ceramic top is quite acceptable and does not result in a loss of energy, unlike other, standard hobs (electricity, gas).

**When cooking, never use aluminium foil
and never place products wrapped
in aluminium foil directly on the induction hob.**

The aluminium will melt and damage your appliance irreparably.

■ Which types of pan are most suitable?

You probably already have some suitable pans.

- **PANS MADE OF ENAMELLED STEEL WITH OR WITHOUT NON-STICK COATING.**

casserole, deep fryer, frying pan, grill pan, etc.

- **CAST IRON PANS**

To prevent the ceramic top on your hob from being scratched choose a pan with an enamelled base, otherwise never slide the pan across the surface of the hob.

- **STAINLESS STEEL PANS DESIGNED FOR INDUCTION COOKING**

Most stainless steel pans are suitable for induction cooking (casseroles, sauce-pans, frying pan, deep fryer, etc.).

- **ALUMINIUM PANS WITH SPECIAL BASE**

Choose pans with a heavy base, which will ensure more even cooking results (the heat is better distributed).

- NB. Pans which do not have a completely flat base may be suitable, however, they must not be too misshapen.

This hob carries the “**CLASS INDUCTION**” symbol .

By choosing a pan bearing the same symbol, you will be assured of its complete compatibility with your hob, under normal conditions of use.

To help you in your choice, a list of utensils is supplied with this instruction book.

■ Which materials are incompatible?

PANS MADE OF GLASS, CERAMIC OR EARTHENWARE, OR OF ALUMINIUM WITHOUT A SPECIAL BASE OR OF COPPER, OR OF CERTAIN TYPES OF NON-MAGNETIC STAINLESS STEEL.

■ The “pan” test

Its advanced technology enables your induction hob to recognise most types of pan.

Place your pan on a heating zone at power setting **3**:

- if **the display does not flash** your pan is **compatible**,
- if it **flashes** then your pan **cannot be used** for induction cooking.

■ Precautions

Building in

Please comply scrupulously with the following points:


- The walls above the worktop and immediately next to the hob must be heat-resistant.
- Laminated surfaces and the adhesives used to fix them must be heat-resistant to avoid any deterioration.
- The cool air gap located underneath and to the rear of the hob is there to increase its reliability by ensuring that it remains cool in all types of fitting arrangement.
- The hob must not be installed above a dishwasher, washing machine, refrigerator or freezer.

● Protecting the cut-out:

The chipboard used in the manufacture of worktops swells relatively quickly when in contact with humidity. Apply a varnish or a specialist glue to the edge of the cut-out to protect it from any steam or condensation which may originate from under the worktop.

- Make a cut-out in the worktop with the dimensions required. The minimum distance of 40 mm should be measured from the wall and any side walls (rear and/or sides).

Protection from heating is Type Y in accordance with IEC 335-2-6

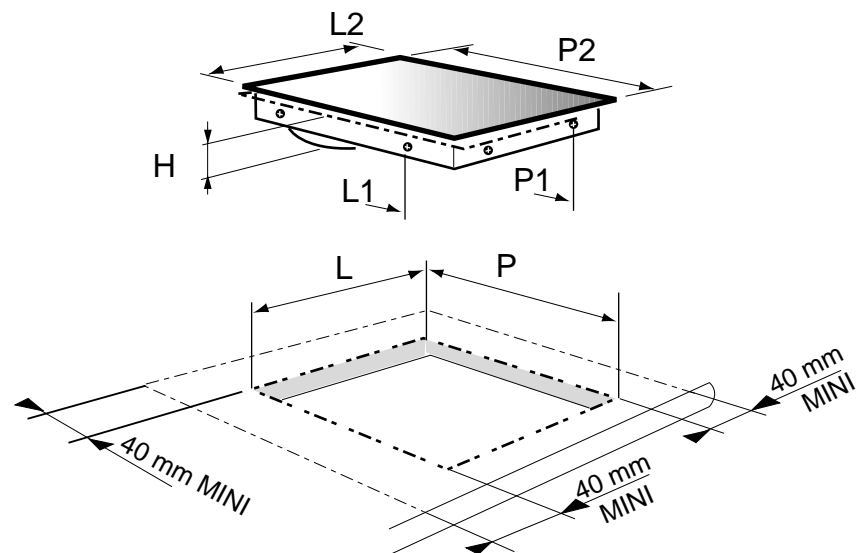

Technical data

Operating voltage	220/240V - 50/60Hz
Total power consumption	2800W

Cut-out dimensions of the furniture

Width	L	265 mm
Depth	P	490 mm
Space needed under the worktop	H	63,3 mm

Overall dimensions below the worktop

Width	L1	263 mm
Depth	P1	488 mm

Overall dimensions above the worktop

Width	L2	290 mm
Depth	P2	515 mm

Weight	approx. 6.5 kg
---------------	----------------


Installation options

- above an empty unit or drawer
- above an oven of another brand
- above an oven of the same brand

Your induction hob must always be well-ventilated.

Make sure that the flow of air through the ventilation grille at the back is completely unobstructed.

Above an empty unit or drawer

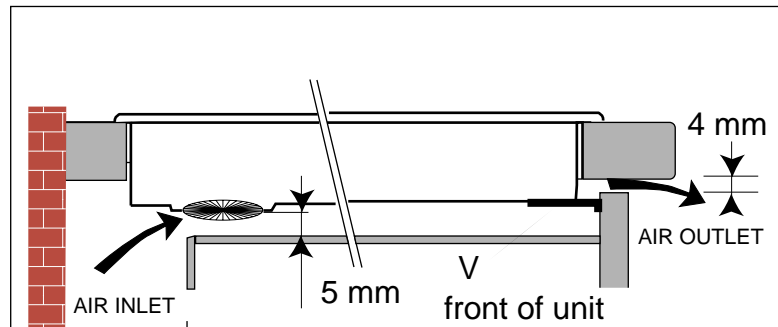


Fitting the hob :

- Unscrew the screws **V** on the hob air guide.
- Place your hob in the cut-out.
- Pull the air guide out until it comes into contact with the front (if this is a door or a drawer, pull the guide out more than necessary and push it back by closing the door or drawer) then replace the screws **V** on the guide

Above an oven of another brand

It is essential that you install an insulation kit between the oven and the hob (available from your dealer's After Sales Service). This arrangement **restricts** installation of the oven to the **lower position** in the unit.

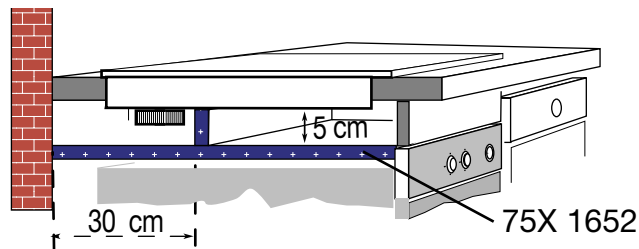


Electrical Connection

These hobs are supplied with an 05 VVF power supply cable (cross-section 1.5 mm²), with 3 cores (of which one for the earth: yellow/green) and should be connected to the mains by a socket which complies with the EEC 7 regulations or by using a double-pole circuit breaker with a contact gap of at least 3 mm.

If this power supply cable is damaged, or if you wish to change it, it can only be replaced by your After Sales Service as this requires specialist tools.

220/240 V single phase

Connect the three wires to your mains supply, in accordance to the colour of the wires.

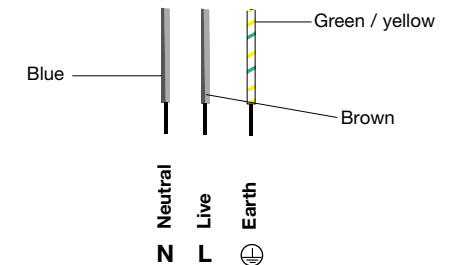

Your mains fuse must be: 16 amp

Remarks

When your hob is first connected to the power supply or after a long power cut, a code lights up on the keypad.

It disappears automatically after about 30 seconds or the first time any of the touch controls on the keypad is pressed. This display is normal and reserved for the use, as required, of your After Sales Service.

WARRANTY AND SERVICE

DOMESTIC WARRANTY - FULL FIVE YEAR WARRANTY

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during the first five years of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

COMMERCIAL WARRANTY - ONE YEAR WARRANTY

When this appliance is installed in a commercial application, you, the Consumer, have under the relevant laws in respect of this appliance, during your first one year of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent, will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

WHAT THESE WARRANTIES DO NOT COVER

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for any consequential damages from any malfunction.

The Consumer, must make the appliance available for servicing and shall bear any costs incurred for any de-installation and/or re-installation required to make the appliance available for servicing.

Kleenmaid St George are not liable for any consequential damage incurred during de-installation or re-installation.

WARRANTY DOES NOT COVER REPLACEMENT OF LIGHT GLOBES OR GLASS BREAKAGE DUE TO IMPACT

In case of fractured glass do not use your appliance.

WARRANTY REGISTRATION

Please complete the enclosed warranty card and retain it together with your proof of purchase document. These documents will need to be viewed by our Service Representative should you request in warranty service.

SERVICE ASSISTANCE

To assist you when phoning our After Sales Service number to arrange a service call please complete the following details and have them ready when you call.

Model Number _____ Date of purchase _____

Kleenmaid Store purchased from _____ Date of installation _____

KLEENMAID AFTER SALES SERVICE

1300 652 100

Other products in Kleenmaid St George
range of world's best appliances:

Washers

Dryers

Dishwashers

Ovens

Cooktops

Rangehoods
Sinks

Waste Disposal

Taps

Cookware

Refrigerators

Freezers

Vacuum Cleaners

**For sales information on the full range of quality kitchen
and laundry appliances, phone 13 13 08.**

For service related enquires, phone 1300 652 100