

OVEN

c o l l e c t i o n

Instructions for Use and Warranty Details

Deluxe Multifunction Ovens

TO80S - Stainless Steel

TO81W - White

TO82B - Black



KLEENMAID
THE WORLD'S BEST



A large, white, stylized letter 'C' is centered within a solid black square. The 'C' is thick and has a slight shadow effect, giving it a three-dimensional appearance.

Congratulations on the purchase of your new Kleenmaid appliance. This appliance has been designed and manufactured to give you years of reliable performance. For best results, carefully read the instructions on how to install your new appliance. Correct installation will avoid delays and unnecessary service calls.

Once installation is complete, read this booklet and get to know the controls and the features of your new appliance.


**If you need further information call our
Customer Care Centre
1300 652 100**

We reserve the right to alter the specifications with no influence on the operation of the appliance. This instruction manual cannot be reason for claim.

CONTENTS

General description.....2
Oven operation.....4
Programmer operation.....5
Spit roaster.....8
Removing roasting trays9
Practical advice.....10
Tables12
Defrosting14
Cleaning15
What to do if.....17
Installation18
Wiring Diagram19
Warranty and Service.....21

WARNING


Before using the oven for the first time, it should be switched on using the program  at 250°C for half hour. This will eliminate any remains of grease from the manufacturing process. Then, clean it with soap and water.

High temperatures are reached inside the oven during cooking. Do not let children near it.

Technical data and oven identification information are given on the data plate. This is located on the front of the oven. This plate should be consulted before making any electrical connections.


IMPORTANT: Electrical connections and repairs must be made by a specialist familiar with the legal requirements and standards in your State.

GENERAL DESCRIPTION

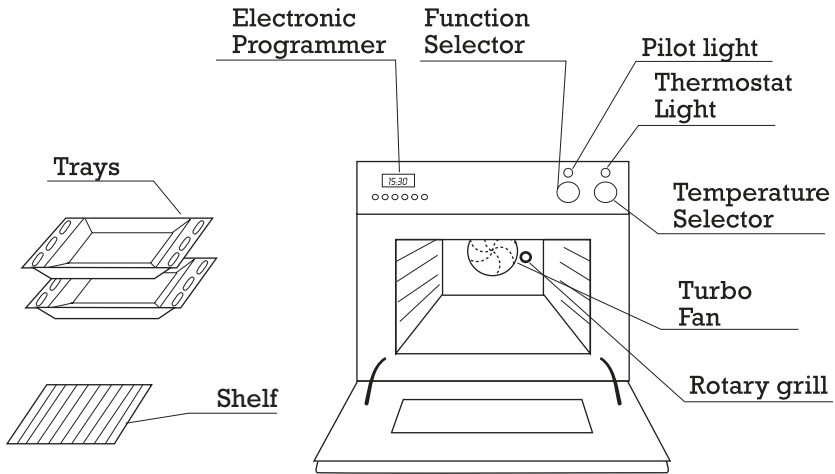

ELECTRONIC PROGRAMMER

Provides clock function plus the programming of automatic cooking stop, automatic cooking start and stop, manual cooking and warning functions.

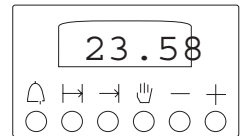


SPIT ROASTER

Roasting and browning.




HIDDEN CONTROLS

The controls can be hidden and revealed simply by pressing them.

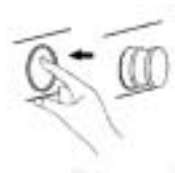

TEMPERATURE SELECTOR

This is used to select the cooking temperature, whether regular or grill (See tables). The thermostat light switches off when the temperature is reached and switches on and off during cooking to maintain the chosen temperature.

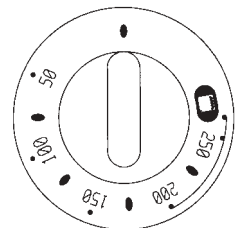

GENERAL DESCRIPTION

PROGRAMME SELECTOR

This allows you to select oven heating programmes (See tables).
The pilot light comes on when ever a programme is selected.



Defrosting: All elements heat to a very low temperature, allowing the perfect defrosting of food.



Conventional heat: Heats from above and below, in the conventional way.



Traditional heat: Heats from below.



Half grill: For grilling only the centre of the tray, for small items (plus rotary grill).



Full grill: For grilling from above over the entire area of the tray (plus rotary grill).




Fan assisted grill: For grilling and roasting, spreading the heat with a fan.



Fan forced plus traditional heat: Heats from below and in the centre, spreading the heat with a fan.




Fan assisted conventional heat: Heats from above and below, spreading the heat with a fan.

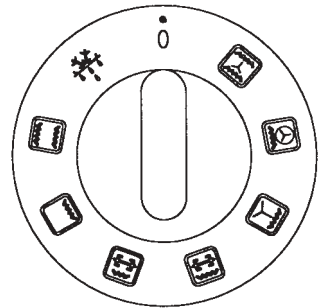



OVEN OPERATION

- 1** Place the food into the oven on the tray at the recommended height .
(See tables)

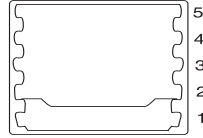

 
- 2** Use the programmer required. See programmer operating instructions.




- 3** Select the heating method using the program selector.
For example:  (See tables).



- 4** Select the cooking temperature or the grill temperature using the temperature selector.
For example: 150°C (See tables).

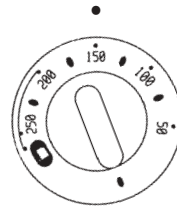

- 5** When cooking ends, set the program and temperatures selectors to zero. (0 and ●)

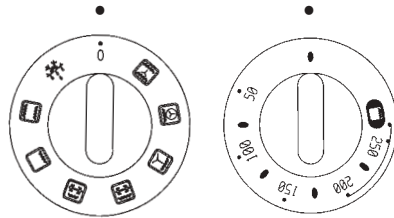

NOTE: The oven must always be used with the door closed for all programmes, including grill.

PROGRAMMER OPERATION

The programmer can be used to carry out cooking at a certain time, after which the oven automatically switches off. Even when you're not at home, the oven will automatically switch on and then off again when cooking is finished.


In any case, if you do not wish to program the oven, it can be used normally without the programmer.

The programmer can also be used as an alarm clock (without switching on the oven) and as a clock.


SETTING THE CLOCK


1

When the oven is installed, or after a power cut, the display will show *0.00*, flashing.

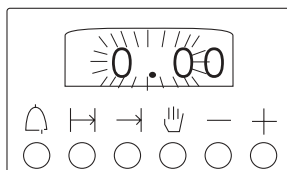


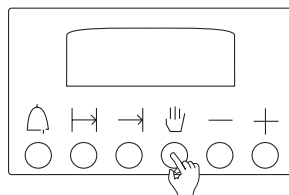
2

Press and hold in the  button and use the - + buttons to set the time.
For example: *13.30*

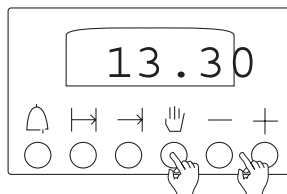

MANUAL OPERATION

To use the oven without programming, press the  button.



The oven may now be used as described in the "Oven Operation" section. Remember that the oven is operating without programming and that you will need to switch it off when cooking is over.


PROGRAMMER OPERATION

USING THE ALARM

You can use the oven without the programmer switching it off but sometimes it's handy to be warned after a certain period of time has passed or even as an alarm clock without cooking.

- 1** Press and hold in the 🔔 button and use the - and + buttons to set the alarm time.

For example: 30min.

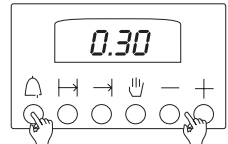


- 2** If you also want to use the oven, either manually or with programming, follow the corresponding instructions.

The alarm will start to sound when the time period has elapsed; to silence it, press the 🔔 button.

NOTE: The alarm has three (3) different tones To change the tone, proceed as follows:

1. With the clock showing the time of day in Manual Operation Mode displaying the 🖐️ symbol, ie without any cycle or operation functions.
2. Wait 10 seconds then press the minus (-) button once for each new tone. Continue until the desired tone is reached.

This operation may be carried out in any program when ever the alarm sounds.

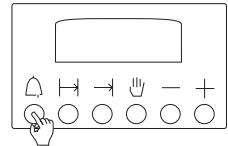


Remember that the alarm does not switch off the oven.


PROGRAMMING FOR AUTOMATIC SWITCHING OFF

This is used when you want cooking to start now but to stop automatically after a certain period of time.

- 1** Press and hold in the ⏸️ and use - + buttons to select the time. For example:50min. AUTO appears on the display.

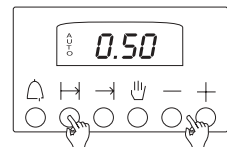

- 2** Carry out the other starting operations described in the "Oven Operations". The alarm will start to sound when cooking ends and the oven will be switched off. To silence the alarm, press the button ⏸️. Do not forget to set the oven controls to zero. Press the button to remove the flashing AUTO display 🖐️.

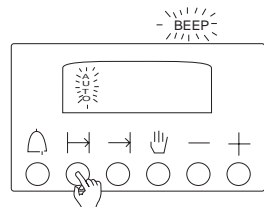


PROGRAMMER OPERATION


PROGRAMMING FOR DELAYED COOKING

You don't want to start cooking now - it's too early and you have to go out, but you want the oven to have done its work when you return and to have switched off automatically.


- 1** Press and hold in the → button and use the - + buttons to set the hour at which you want cooking to end.
For example: 14.30

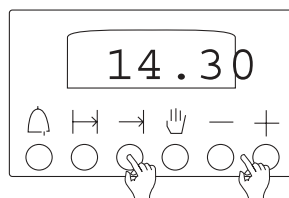

- 2** Now press and hold in the |> button and use the - + to select the cooking time.
For example: 50 min.
AUTO appears on the display.

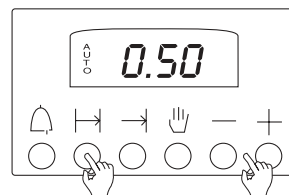

- 3** Carry out the other starting operations described in the "Oven Operation". The oven is now programmed.
In this example, 50 minutes before 14.30, the oven will switch on and will switch off at 14.30 automatically, at which point the alarm will sound. Press the button |> to silence it.
Do not forget to set the oven controls to zero.
Press the 🖐 button to remove the flashing AUTO display.

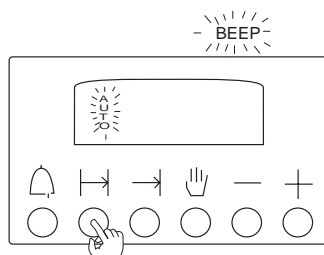


NOTE: You can change the end time and the duration even when the oven is already working, using the |> and → buttons.

It is advisable, before programming the oven, to make a test programming.


To erase a program, press the 🖐 button. If the oven controls are not set to zero, it will continue to function.

SPIT ROASTER


- 1** Fit the spit "A" into the spit support "B", as shown in Figure 1, and then fit it into the oven as shown in Figure 2.

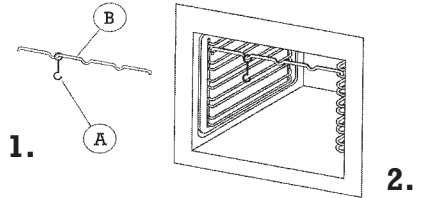


- 2** Skewer food on spit and secure with sliding blades.

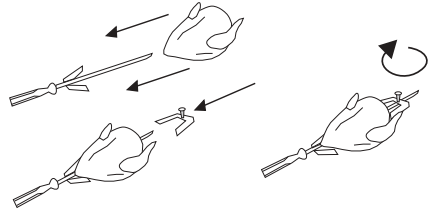


- 3** Insert spit point in orifice at back of oven and rest outer end on bracket. Insert oven tray at bottom shelf level. Unscrew spit handle to close oven door.

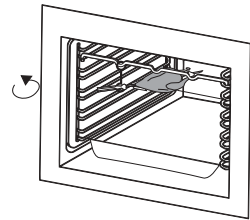

- 4** Select grill setting and start (See operation).
IMPORTANT: Always close oven door.

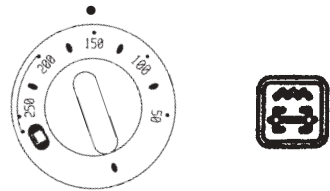


- 5** When finished roasting, screw spit handle back on and remove spit. Release sliding blades and withdraw spit from food.

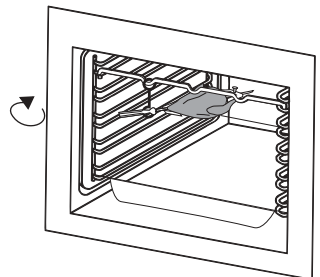


REMOVING ROASTING TRAYS


- 1** First insert the tray carrier shelf ① in the position shown in the figure.

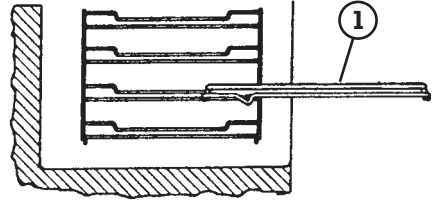

- 2** Then insert tray ② in the upper part of the shelf ① in the position shown in the figure.

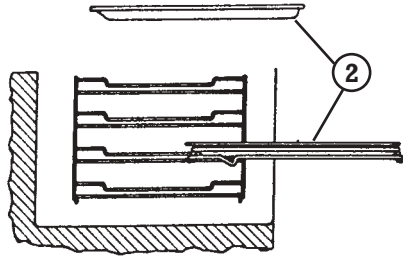


- 3** Fit the assembly into the oven.
To remove the trays once cooking has ended, pull the tray carrier shelf fully outwards and then either:
1. Remove the tray from the shelf.
 2. Remove the entire assembly by slightly lifting the shelf over the stops that prevent it from falling.

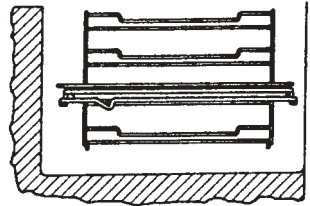

- 4** The shelf and tray assembly can be placed in any of the four levels, taking into account its position as shown in the figure:

1. Shelf
2. Tray

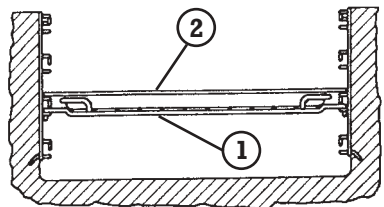

PRACTICAL ADVICE

Always use the tables in this book as a reference for programming your oven. Even if you are cooking to your own recipe, the entry for a similar type of food will help you to choose the program, temperature and tray position.

CONSULT THE TABLES


The cooking times are guidelines and will be longer if the food is placed into the oven directly from the fridge. The times will also depend on your own personal taste, on whether you prefer it rare or well done.

GUIDELINE TIMES


Single piece and very large items require longer times. The tables are designed for quantities for 4 persons.

TABLES FOR 4 PERSONS


Use the temperatures in the tables. A temperature higher than that given may cause excessive steam and smoke.

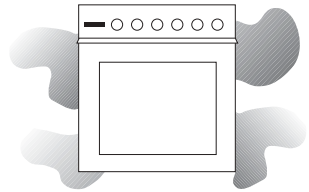

 Do not place food or containers directly on the floor of the oven.
Always use the tray or shelf.




Place the tray under the grill for roasting and baking. This way, all the juices will fall on the tray and the oven will keep clean. The oven should preferably be pre-heated for 10 minutes, especially for deserts and fish.

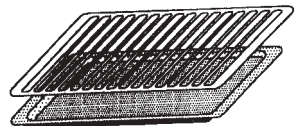

PRACTICAL ADVICE

With deserts, test cakes by pricking with a rod in the centre. If no mix adheres to the rod when it is withdrawn, the cake is ready.

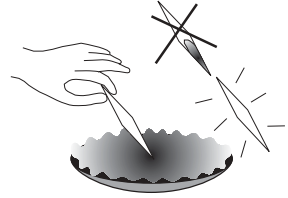


If the mix sinks, use a temperature which is 10° lower next time.

-10°C

If the underside of the cake is overdone, next time place the cake on a higher level in the oven
By contrast, if the top of the cake is overdone, next time place it on the level below.
In both cases, you should select a lower temperature.

-10°C

Allow meat and poultry to rest for 5 to 10 minutes inside the oven, once cooking has finished.

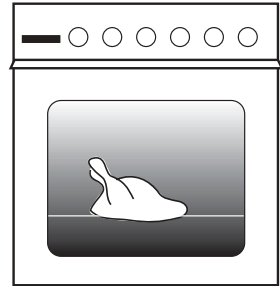

Always use the grill with the oven closed. If the food does not occupy the entire tray, place it in the centre.
Poultry will be browned well if basted.


 



















 


 



































DON'T USE ALUMINIUM FOIL ON THE BASE OF OVENS

The use of aluminium foil on the base of the oven to collect spills and improve cleaning is not recommended. Foil or dishes with reflective qualities must never be placed on the base of the oven during cooking as the concentration of the direct and reflected heat will damage the enamel surface. Damage resulting from such use is not covered under the provisions of the warranty.

TABLES


| FOOD | PROGRAMME | TEMPERATURE | TIME | POSITION | PRE-HEAT | ACCESSORIES |
|-------------------------------|-----------|-------------|------------|----------|----------|-------------|
| ENTREES AND VEGETABLES | | | | | | |
| Baked eggs | | 225 ° | 5 min | | NO | |
| Cantaloupes | | 200 ° | 20 min | | NO | |
| Paella | | 225 ° | 35-40 min | | NO | |
| Baked cauliflower | | 225 ° | 10-12 min | | YES | |
| Baked potatoes | | 225 ° | 45-50 min | | NO | |
| Baked peppers | | 200 ° | 30-35 min | | NO | |
| FISH AND SEAFOOD | | | | | | |
| Roast | | 210 ° | 15-18 min | | YES | |
| Baked fish | | 250 ° | 7-10 min | | YES | |
| Baked fish | | 225 ° | 10-15 min. | | YES | |
| Roast fish | | 250 ° | 30-35 min | | NO | |
| Trout | | 210 ° | 12-14 min | | YES | |
| Baked bream | | 210 ° | 25-30 min | | YES | |
| Sole | | 225 ° | 6-10 min | | YES | |
| VARIOUS | | | | | | |
| Pizza | | 200 ° | 30-35 min | | NO | |
| Turnover | | 200 ° | 25-30 min | | YES | |
| Bread | | 225 ° | 25-30 min | | YES | |
| Cakes | | 200 ° | 12-14 min | | YES | |


TABLES


| FOOD | PROGRAMME | TEMPERATURE | TIME | POSITION | PRE-HEAT | ACCESSORIES |
|-------------------------|---|-------------|-------------|---|----------|--|
| MEAT AND POULTRY | | | | | | |
| Whole sirloin |  | 175 ° | 60-70 min |  | NO |  |
| Beef ribs |  | 150 ° | 90-110 min |  | NO |  |
| Roast lamb |  | 175 ° | 60-70 min |  | NO |  |
| Rabbit in sauce |  | 175 ° | 45-55 min |  | NO |  |
| Roast beef |  | 150 ° | 70-80 min |  | NO |  |
| Ox tail |  | 200 ° | 120-140 min |  | NO |  |
| Roast pork, 1kg |  | 150 ° | 50-60 min |  | NO |  |
| Hamburgers |  | 250 ° | 8-10 min |  | YES |  |
| Sausages |  | 250 ° | 9-12 min |  | YES |  |
| Roast chicken |  | 175 ° | 45-50 min |  | NO |  |
| Roast turkey |  | 190 ° | 140-160 min |  | NO |  |
| Duck à l'orange |  | 210 ° | 90-100 min |  | NO |  |
| Roast quail |  | 225 ° | 7-10 min |  | YES |  |
| DESSERTS | | | | | | |
| Apple pie |  | 190 ° | 40-45 min |  | NO |  |
| Pears in wine |  | 225 ° | 45-50 min |  | NO |  |
| Cream caramel |  | 175 ° | 30-35 min |  | NO |  |
| Soufflé |  | 200 ° | 10-12 min |  | YES |  |
| Biscuit |  | 180 ° | 30 min |  | YES |  |
| Baked apple |  | 175 ° | 30-35 min |  | NO |  |
| Pastry |  | 175 ° | 30-35 min |  | YES |  |

DEFROSTING

Always place food to be defrosted on the shelf at level 2.

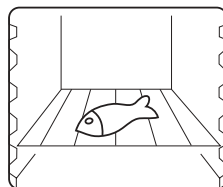

Use the  programme to defrost, setting the temperature to 75°C.

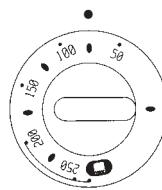


DEFROSTING TABLE


| FOOD | WEIGHT | TIME | PIECES |
|------------------------|----------|--------|--------|
| MEAT | | | |
| Round | 1,000 g. | 90 min | 1 |
| Fillets | 400 g. | 20 min | 4 |
| Minced meat | 1,000 g. | 60 min | 1 |
| Chopped meat | 1,000 g. | 70 min | 20 |
| Whole chicken | 1,200 g. | 70 min | 1 |
| Chicken pieces | 1,200 g. | 40 min | 20 |
| Sausages | 500 g. | 25 min | 12 |
| Loin, pieces | 1,000 g. | 90 min | 1 |
| Loin in fillets | 450 g. | 40 min | 8 |
| FISH | | | |
| Hake | 800 g. | 60 min | 1 |
| Fillets | 480 g. | 20 min | 4 |
| Small fish (mullet) | 700 g | 30 min | |
| Tuna in slices | 1,200 g. | 25 min | 2 |
| Prawns | 1,000 g. | 30 min | 40 |
| VARIOUS | | | |
| Mixed vegetables | 400 g. | 20 min | |
| Bread, cakes, etc | 250 g. | 10 min | |
| Pre-cooked food | 500 g. | 30 min | |

CLEANING

 Never use sandy or abrasive detergents. Clean the oven exterior with a soft damp cloth using soapy water.



All the panels inside the oven, except for the floor and ceiling, are covered with self-cleaning enamel. These panels eliminate small splashes of grease during cooking without the need to clean them. Some large splashes may not disappear immediately; after removing the cooked food, leave the oven at 250°C for half hour. (Do not let children near it).

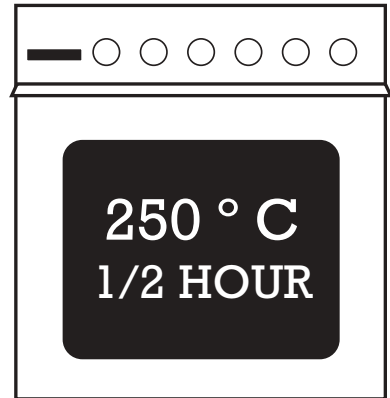


However, if there is heavy splashing, panels must be washed. To make cleaning easy, the side panels are also removable. Cleaning can be made in dishwasher or by hand, with warm water and a non-metallic sponge. Instructions to remove the side panels:

- 1) Push down the upper stick of guides until it is released.
- 2) Turn the guides as shown in the picture and pull out. The guides will be free.
- 3) Take the panel down.

Oven back can also be removed by loosening the screws.


NOTE: Do not use special sprays on self-cleaning ovens.

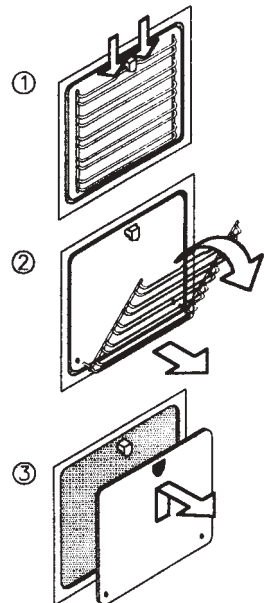


CLEANING

The door may also be removed to facilitate cleaning. Carefully follow these steps in order not to cause a fault.


Open the door downward and turn the latch of the hinges as shown in the diagram.

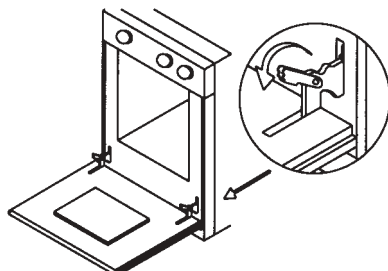


Close the door smoothly until it stops. Then, holding the door with both hands, pull upward and continue closing it until the hinges come out from their slots. The door will then be free.

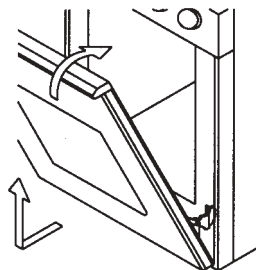

To replace the door, fit the hinges fully home in their slots, as shown in the diagrams.

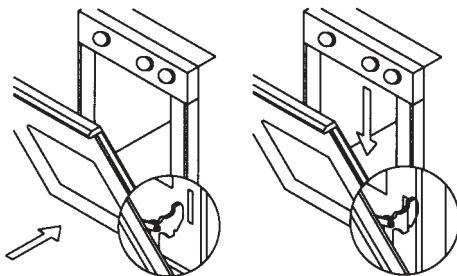

Open the door downward and turn the latch to their original position. The door is now installed.

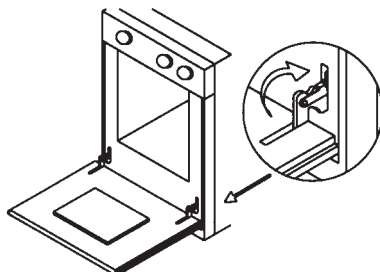

WHAT TO DO IF...

The oven does not switch on and the programmer's display does not light up.

- Fuses blown. Replace them.
- If the fuses blow again, too many devices are running!
- If the oven still does not work, call Kleenmaid Customer Call Centre.

The oven does not switch on and the programmer is flashing 0.00.

- Probably there has been a power cut. Adjust the time on the programmer and repeat the switching on of the oven.

The light does not work even though the oven is on.

- Probably the light bulb has blown. When the oven is cold, unscrew the lamp cover, remove the bulb and replace it with another (switch off at the mains first, for safety reasons).


The oven fills with smoke coming from the oven itself.

- All ovens produce smoke to a greater or lesser extent. This is normal, especially for roasts.
You can reduce the smoke by reducing the amount of fat or liquid in the tray and by using the oven at a lower temperature from now on. Do not use temperatures which are higher than those shown in the tables.
- The grill element may be dirty, with grease from a previous roast. When the grill is switched on, this grease will be burnt and much smoke will be created for a few minutes. Try to keep the grill clean.

INSTALLATION

UNPACKING

Carefully remove all the elements protecting the apparatus. The two brackets "A" in two parts of the oven must also be removed, as shown in the figure.

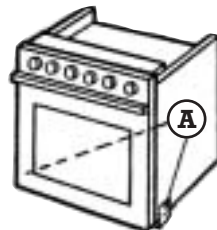



INSTALLATION

The measurements of the holes in the kitchen unit must be as shown in the figures, for tower or under bench mounted units.


It is very important to maintain the ventilation holes at the back in order that the oven operates correctly.

See the Kleenmaid Technical Specification Brochure for specific instructions on mounting underbench and tower installation.


The electrical circuit must be correctly earthed.

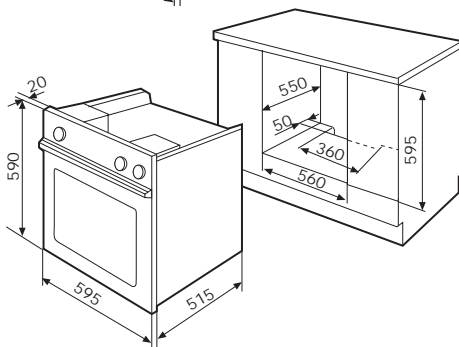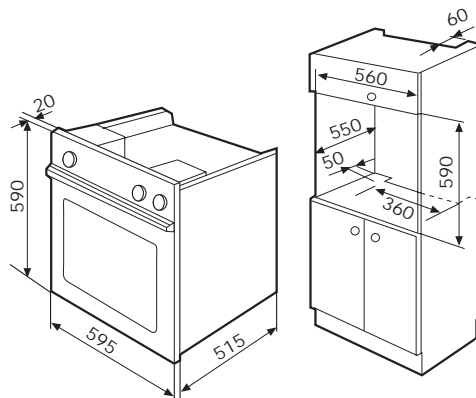


Once wiring is connected, fit the oven into the unit, taking care not to leave any excess cable lying on top of the oven.

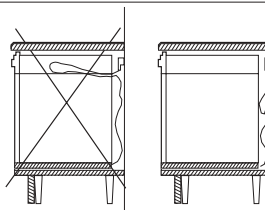

Fix the oven to the unit with 4 screws (included in the oven packaging inclusions).

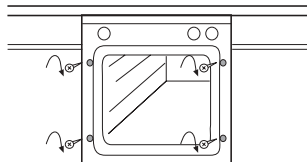

WIRING DIAGRAM

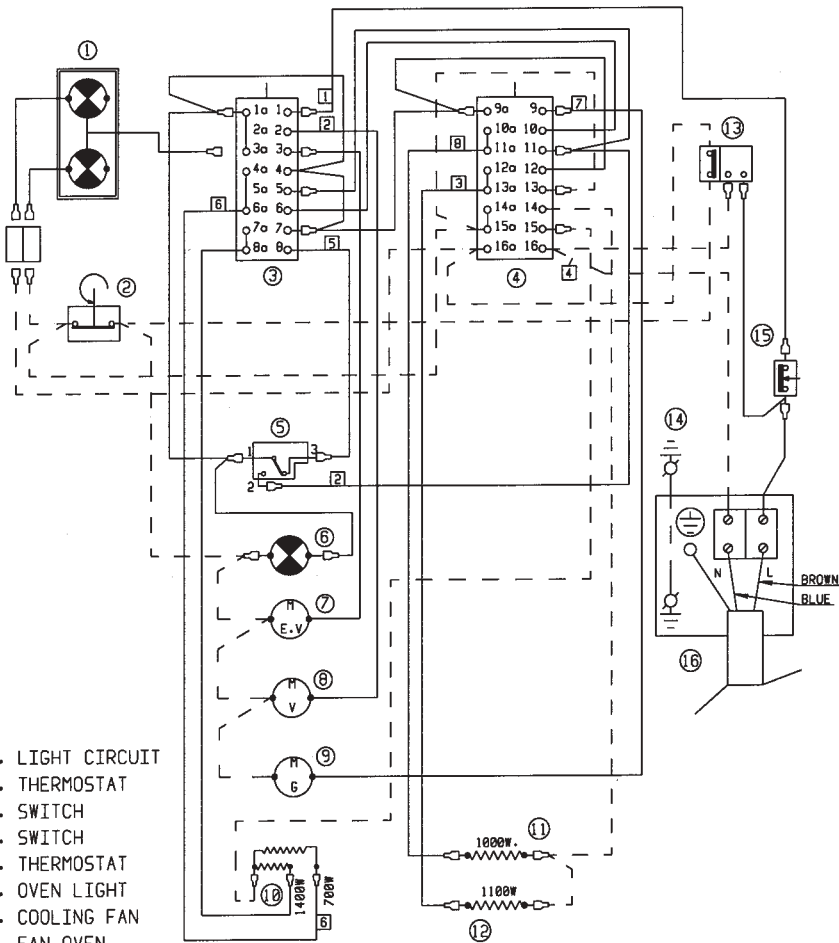

1. LIGHT CIRCUIT
2. THERMOSTAT
3. SWITCH
4. SWITCH
5. THERMOSTAT
6. OVEN LIGHT
7. COOLING FAN
8. FAN OVEN
9. SPIT ROASTER
10. UPPER HEATING ELEMENT
11. CIRCULAR HEATING ELEMENT
12. BOTTOM HEATING ELEMENT
13. PROGRAMMER
14. EARTH LIGHT
15. SAFETY THERMOSTAT
16. MAIN BLOCK

— — — — — = GREEN-YELLOW COLOUR
 — — — — — = RED COLOUR
 - - - - - = BLUE COLOUR
 □ TERMINAL WITH COVER

| POSITIONS AND FUNCTIONS | 1a | | 2a | | 3a | | 4a | | 5a | | 6a | | 7a-8a | | 9a | 10a-11a | | 12a-13a | | 14a-15a | | 16a | |
|-------------------------------|----|---|----|---|----|---|----|---|----|----|----|----|-------|----|----|---------|---|---------|--|---------|---|-----|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | | | | | | | |
| 8 | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | ✱ | X | X | | | | X | | X | X | | | X | | | | | X | | | | | X |
| 2 | ☐ | X | | X | X | | | | X | | | | | | | | | X | | X | X | X | X |
| 3 | ☐ | X | | X | | | | | | | | | | | | | | X | | X | | | X |
| 4 | ☒ | X | | X | | | | X | X | | | | | | | | | | | | | X | X |
| 5 | ☒ | X | | X | X | | | X | X | | | | | | | | | | | | | X | X |
| 6 | ☒ | X | X | X | X | | | X | | | | | | | | | | | | | | X | X |
| 7 | ☒ | X | X | X | | | | | X | | | | | | X | | X | X | | X | X | X | X |
| 8 | ☒ | X | X | X | | X | | | X | | | | | | X | | | X | | X | X | X | X |

WARRANTY AND SERVICE

DOMESTIC WARRANTY - FULL FIVE YEAR WARRANTY

In addition to all statutory rights which you, the Consumer, have under the relevant laws in respect of this appliance, during the first five years of ownership as the original purchaser of this Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

COMMERCIAL WARRANTY - ONE YEAR WARRANTY

When this appliance is installed in a commercial application, you, the Consumer, have under the relevant laws in respect of this appliance, during your first one year of ownership as the original purchaser of the Kleenmaid appliance, we guarantee that any fault caused by faulty material or workmanship becoming apparent, will be rectified free of charge for parts and labour, provided that all service is performed during normal working hours by Kleenmaid or their designated Agents. Where the appliance is installed outside the normal servicing area of the above, the Purchaser must pay for the cost of transporting the appliance to and from the Agent or the Agent's travelling cost to and from the Purchaser's home.

WHAT THESE WARRANTIES DO NOT COVER

We are not responsible for any damage or malfunction unless caused by a defect in material or workmanship. This includes but is not limited to abuse, misuse, improper installation and transportation damage. We are not responsible for any consequential damages from any malfunction.

WARRANTY DOES NOT COVER REPLACEMENT OF LIGHT GLOBES OR GLASS BREAKAGE DUE TO IMPACT

In case of fractured glass do not use your appliance.

WARRANTY REGISTRATION

Please complete the enclosed warranty card and post it to us or phone our Customer Call Centre.

SERVICE ASSISTANCE

To assist you when phoning our Customer Call Centre number to arrange a service call please complete the following details and have them ready when you call.

Model Number: _____ Date of purchase: _____

Kleenmaid Store purchased from: _____ Date of installation: _____

KLEENMAID CUSTOMER CALL CENTRE
CONTACT NUMBER
1300 652 100

Other products in Kleenmaid's range
of world's best appliances:

- Washers
- Dryers
- Vacuum Cleaners
- Dishwashers
- Cooktops
- Cookware
- Rangehoods
- Ovens
- Refrigerators & Freezers
- Sinks & Taps
- Waste Disposals

**For sales information on the full range of quality
kitchen and laundry appliances, phone 13 13 08**

Kleenmaid Head Office:

PO Box 5560, Maroochydore Business Centre, Queensland 4558



Printed on recycled paper.