After Sales Service

Kleenmaid Furniture Vaccum Cleaner

Model Nos.: BIVC3710

kleenmaid

Dismantle the Front

Dismantle the front

Pull the sealing caps off

Remove the screws

Dismantle the front

Pull firmly to remove the front

Make shure that all silicone residues are removed properly.

Lower the backside of the front.

Change the Spring

Change the spring

Remove the screws

Take the wave off and remove the spring.

Attach the spring so that the wire is facing forward.

Change the spring

Fix the screws

Lead the spring with the flap behind and press the flap very firm on the axis until you hear a click.

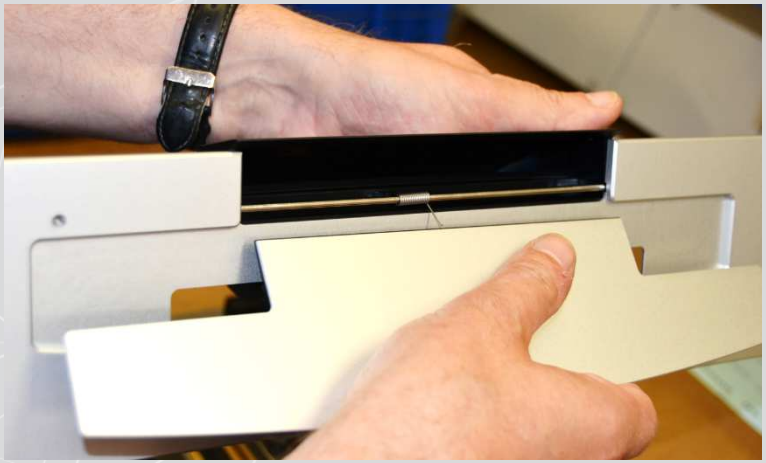

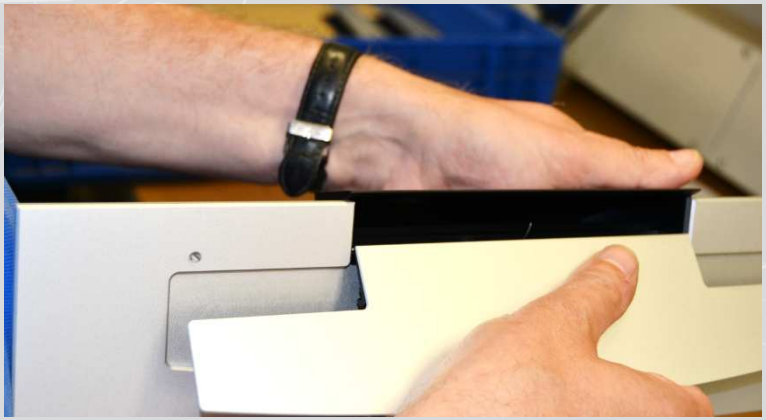

Change the Electronics

kleenmaid

Change the Electronics

Pull the electronics equably
out of the housing

Make sure that you are grounded!
Remove the cables from the board
using a pair of tongs

Change the Electronics

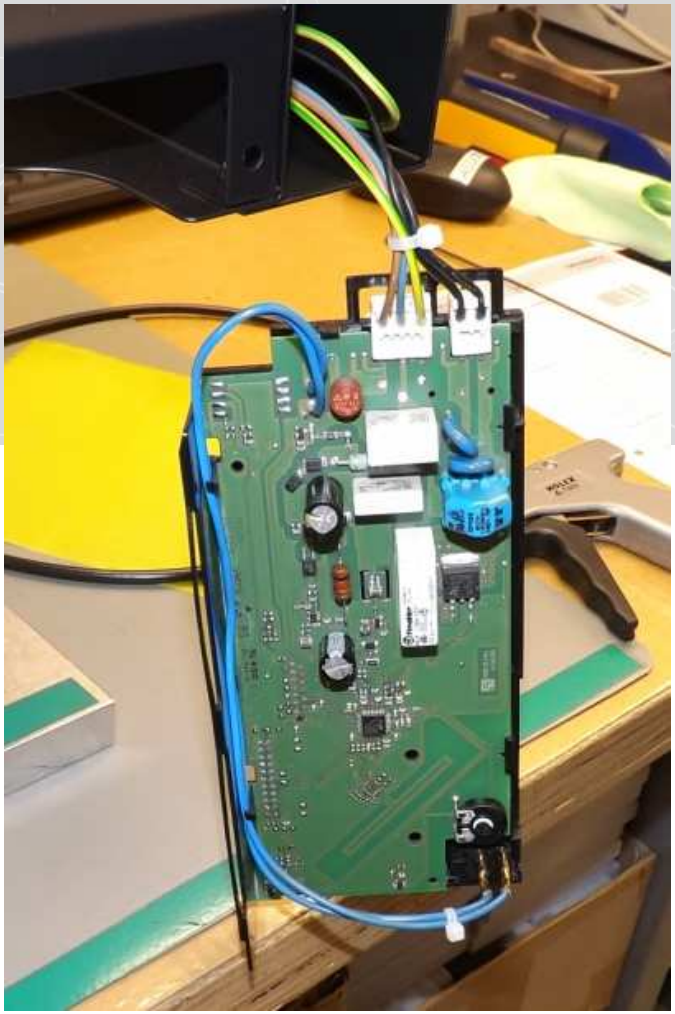

Push the electronics back into the housing

Make sure that you are still grounded!
Take new electronics.
Push the cables on the board with a pair of tongs.

Change the Motor

In order to change the motor you have to remove the electronics first!

kleenmaid

Change the Motor

Drag the cables back.

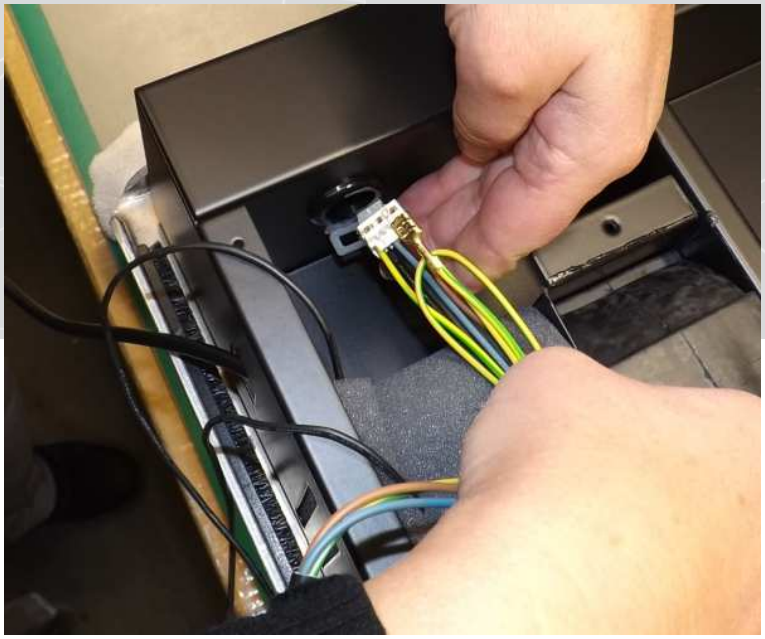

Deplabe the engine out of the holder.

Change the Motor

Deplace the sound insulation.

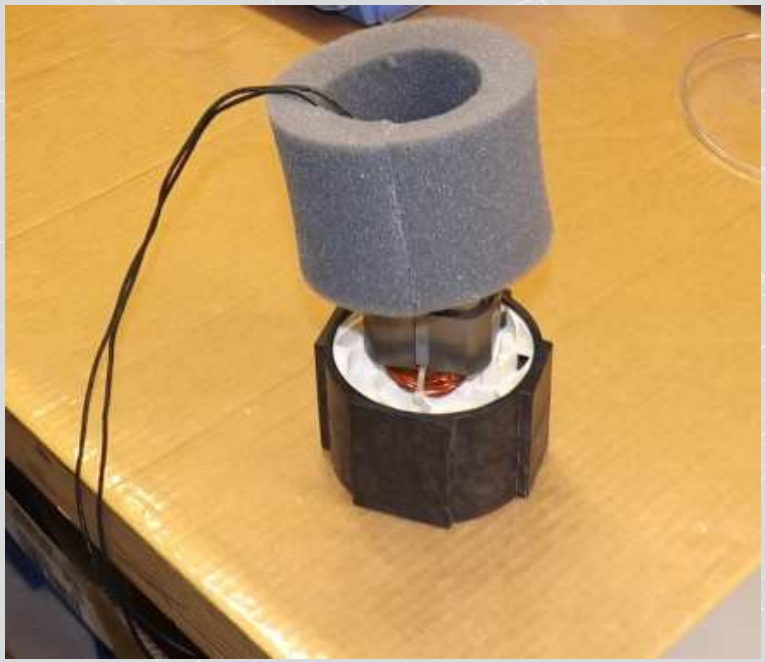

Take the engine out of the mount rubber.

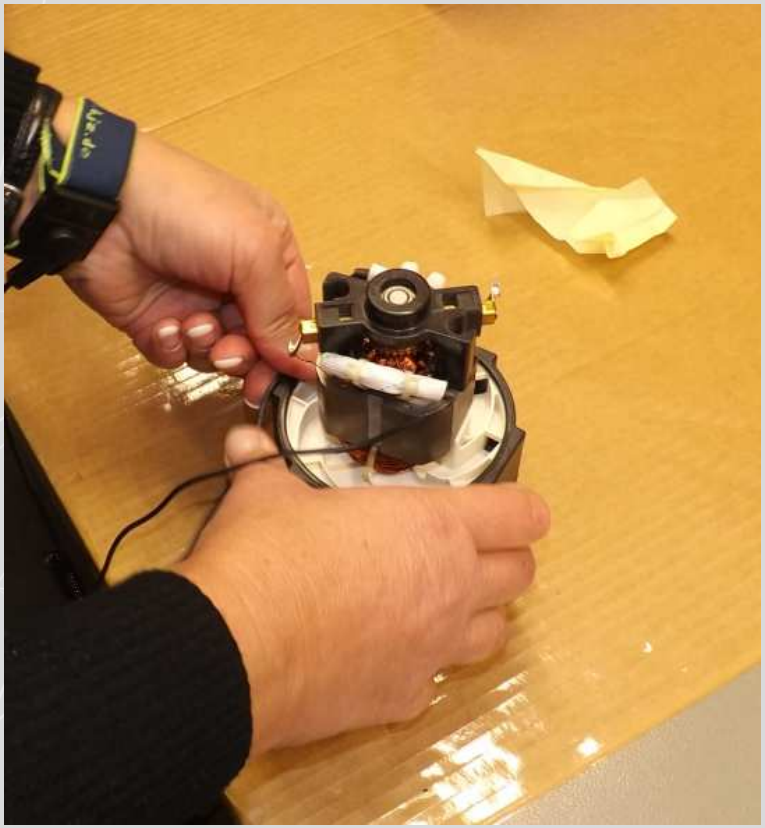

Change the Motor

Take a new motor

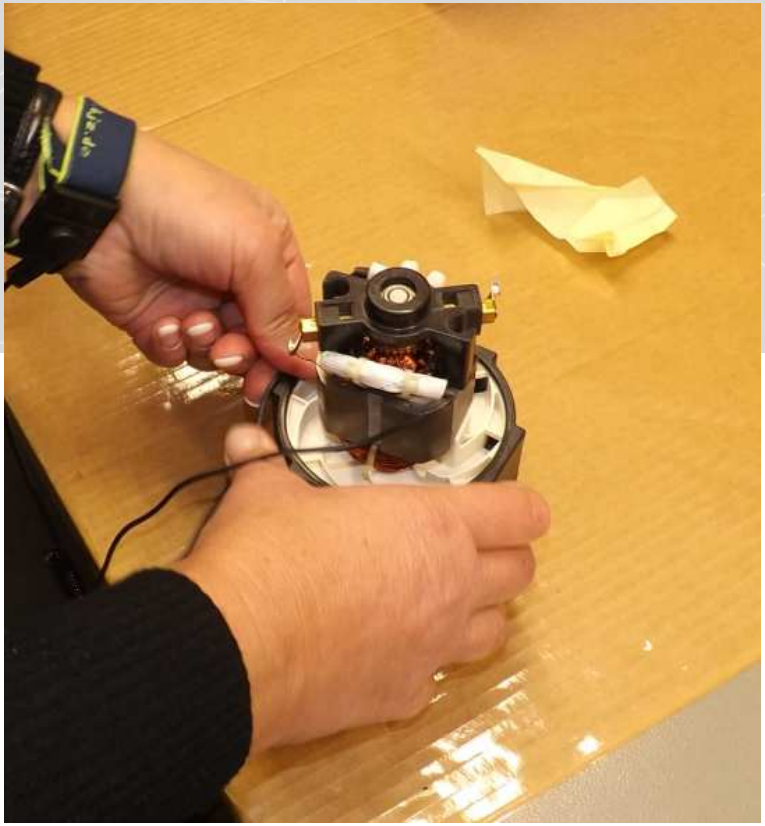

Push engine into engine mount rubber and drag the edge up over the edge.

Put the sound insulation so onto the motor coil that at a later stage the seam is on the unit below.

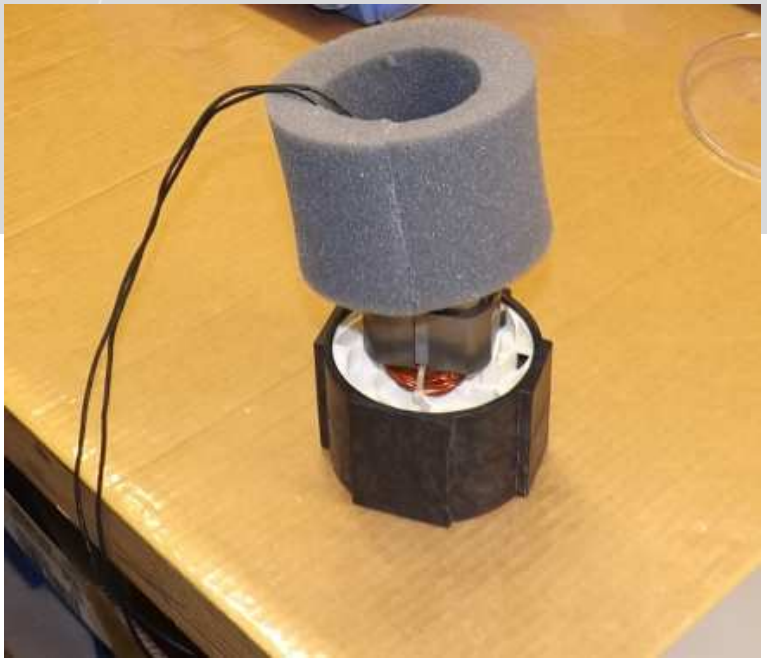

kleenmaid

Change the Motor

Grease the motor fixing to ease the slipping into the bracket

The engine has to be placed concised into the holder.

Change the Motor

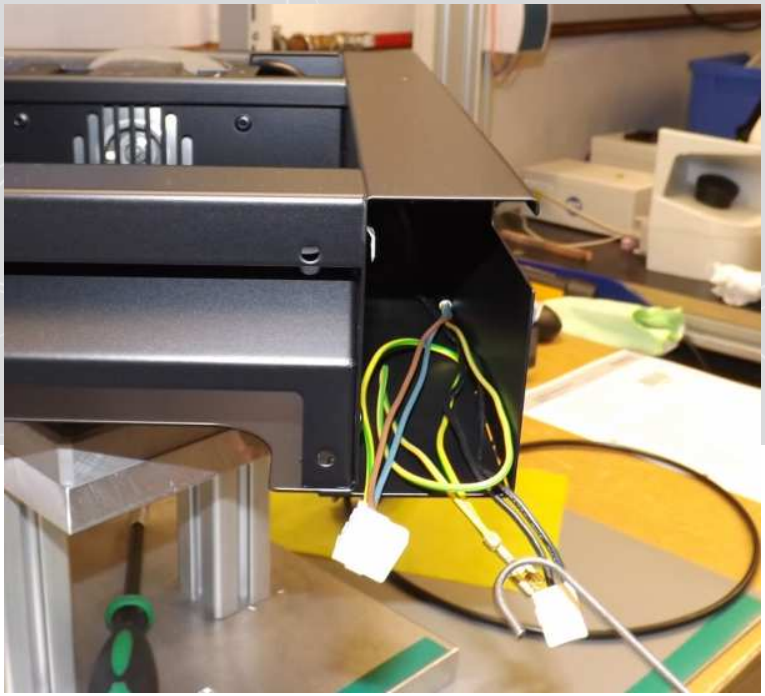

Make sure that the ground wire is right placed.

Link the cables to the electronic.

Pull the cable through the shaft until it touches the front side.
Optionally, use a hook.