KCOMF6012K

SERVICE MANUAL

REPLACE THE TS PROGRAMMER

Replace the Ts Programmer

1. Remove the top cover by removing four securing screws

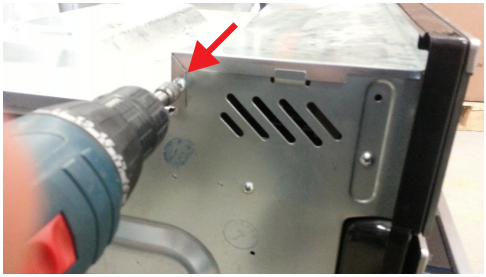

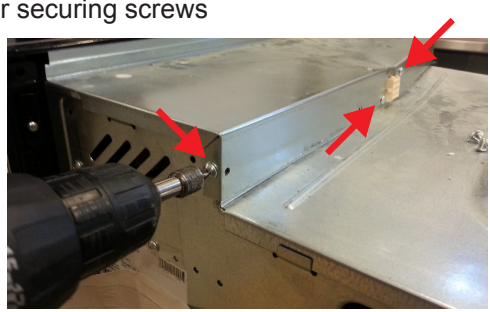

2. Insert a flat screwdriver into the panel slot (where latches are located) and gently pry the panel with the screwdriver to unhook from the body.

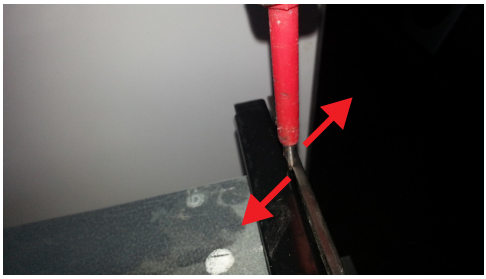

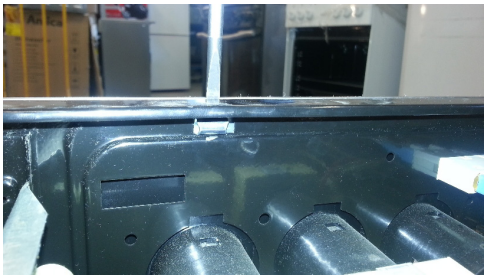

3. Gently pull off the upper part of the panel and use a flat screwdriver to unhook bottom latches (insert the screwdriver at the top), slide out the panel towards you:

Replace the Ts Programmer

4. Disconnect the wiring harness from programmer

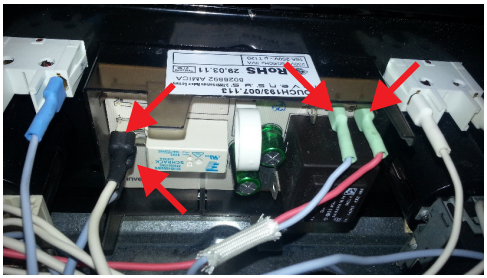
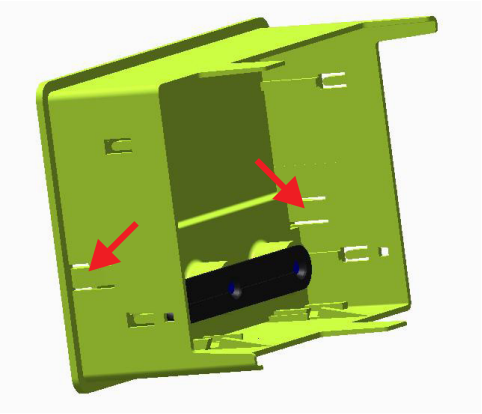
5. After disconnecting the wiring harness, pull the Ts programmer out. Use a flat screwdriver to push two latches on both sides of the programmer housing and slide the programmer in.