SERVICE MANUAL

DEMO modes in the programmers:

OMFH6010, OMFHS6010, KCOMF6012K
OMFH6012, OMFHS6012

Table of Contents

Table of Contents 3
DEMO mode – programmer Tx/Tpx 4
DEMO mode – programmer Tf/Tp 5
DEMO mode – programmer Td 6
Memo 7

DEMO mode – programmer Tx/Tpx

The SMART oven can operate in a DEMO mode. In this mode, the relays of the heating elements are open and they do not operate when any functions are selected. This offers an opportunity to get acquainted with the appliance functionality safely. In this mode oven light and the control panel function as in normal use - you can select and run baking programs (programs run in real time).

How to activate?

To activate showroom demo mode, the appliance must be in clock mode (standby). To activate the demo mode touch and hold the sensor with one finger and touch and hold the center of the display with another finger. Hold down both fingers until DEMO appears at the bottom of the display and activation of the showroom demo mode is confirmed by a short beep.

The deactivation:

Deactivate the showroom demo when the appliance displays the clock (standby). To deactivate the demo mode touch and hold the sensor with one finger and touch and hold the center of the display with another finger. Hold down both fingers until DEMO disappears at the bottom of the display and deactivation of the showroom demo mode is confirmed by a short beep.

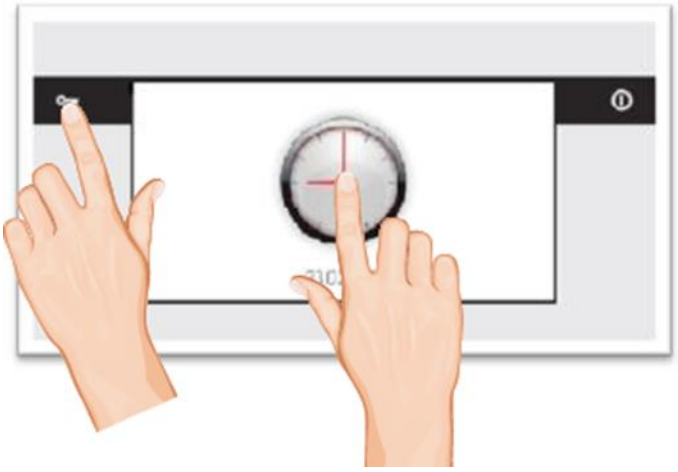

Caution: Deactivation of the showroom demo mode restores the full functionality of the oven and its heating elements.

DEMO mode – programmer Tf/Tp

The Tf/Tp timer can operate in a DEMO mode. In this mode, the relays of the heating elements are open and they do not operate when any functions are selected. This offers an opportunity to get acquainted with the appliance functionality safely.

How to activate?

To activate showroom DEMO mode, the appliance must be in clock mode (stand by). To activate the DEMO mode touch and hold the ◷ and 🌡 sensors and then touch ∧ sensor. Hold all three sensors until word “DEMO” will appear in the lower right corner of the display. DEMO mode is activated - which is confirmed by a short beep

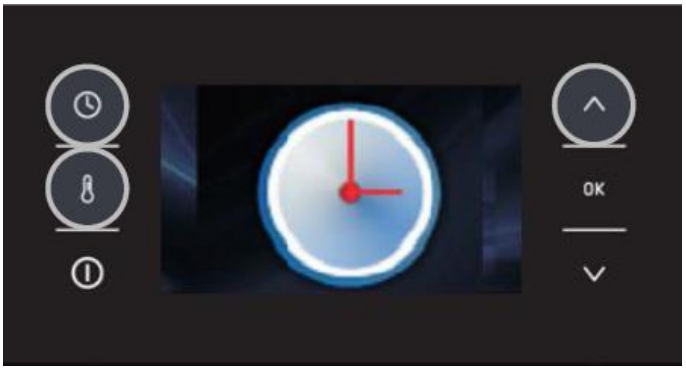

Note: Please pay special attention to simultaneously pressing of the ◷ and 🌡 sensors. If you press them separately one after the other this mode will not be activated.

The deactivation:

Deactivating the DEMO mode is also done in the clock mode (standby). To disable this function, simultaneously press and hold the ◷ and 🌡 sensors and then press ∨ - hold all three sensors until "DEMO" disappears from the right corner of the display. DEMO mode is turned off - which is confirmed by a short beep.

Caution: Deactivation of the showroom demo mode restores the full functionality of the oven and its heating elements.

DEMO mode – programmer Td

Td programmer can enter DEMO mode. In this mode, the relays of the heating elements are open and they do not operate when any functions are selected. Oven lighting is not working. The duration of each program is 10 times faster than during normal use which allows you to quickly familiarize yourself with the functionality of the oven without unnecessary waiting.

How to activate?

To enable this mode, simultaneously press and hold the and sensors and then turn the knob in the opposite direction of the clock movement – hold boths sensors for about 10 seconds. DEMO mode is activated - which is confirmed by a short beep.

Note: Please pay special attention to simultaneously pressing of the and sensors. If you press them separately one after the other this mode will not be activated.

The deactivation:

To disable DEMO mode you need to do the same things as you done when entering it. Deactivation also is confirmed by a short beep.

Caution: Deactivation of the showroom demo mode restores the full functionality of the oven and its heating elements.

Memo