To register your warranty or make a warranty claim, scan this QR code:

cooking collection

Instructions for use and warranty details

40 YEARS 1984-2024

Wall Mounted Canopy Rangehood

Model No: RHSCK92

kleenmaid

Dear Customer,

Thank you for joining our 40th anniversary celebration by choosing Kleenmaid.

Your new appliance has been designed and meticulously tested to ensure that it meets all your culinary requirements, and has been carefully manufactured using top quality materials to give you years of reliable performance.

For best results, carefully read the instructions on how your new appliance is to be installed. Correct installation will avoid delays and unnecessary service call costs.

Once installation is complete, please read this instruction manual carefully and get to know the controls and the features of your new Kleenmaid appliance. These simple instructions will enable you to achieve excellent results from the very first time you use it.

Again, congratulations and thank you for choosing The Best You Can Own.

KLEENMAID

CONTENTS

RECOMMENDATIONS AND WARNINGS	3
COMPONENTS	4
INSTALLATION	5
USE	9
MAINTENANCE	10
TECHNICAL SPECIFICATIONS	12
TROUBLE SHOOTING	13
KLEENMAID WARRANTY	14

NOTE: Before making preparations for or commencing installation, the installer should refer to the current online version of the User Manual, which is available on the Kleenmaid website (see back cover for details).

RECOMMENDATIONS AND WARNINGS

NOTE: Before making preparations for or commencing installation, the installer should refer to the current online version of the User Manual, which is available on the Kleenmaid website (see back cover for details).

INSTALLATION

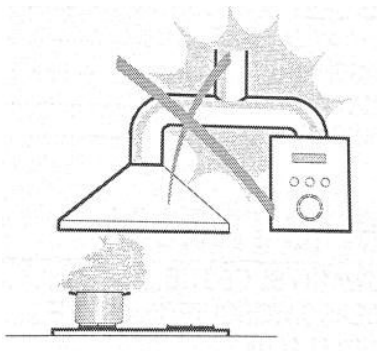

- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood. This distance shall be at least 65 cm. If the instructions for installation specify a smaller distance, this has to be taken into account. The distance of 65 cm can be reduced for: non-combustible parts of range hoods, except grease filters, and parts operating at safety extra low voltage, provided these parts do not give access to live parts if deformed.
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.
- Connect the range hood to the exhaust flue through a pipe of minimum diameter 120mm.
- The route of the flue must be as short as possible.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room) .
- Regulations concerning the discharge of air have to be fulfilled.
- This appliance is for indoor household use only.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- Please unplug before cleaning and maintenance the appliance .Use a soft cloth moisten with mild soap, and then use a dry cloth to wipe it again.
- Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.
- If the range hood is used in conjunction with non-electrical appliances (e.g. gas burning appliances),a sufficient degree of aeration must be guaranteed in the room in order to prevent the back flow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air. When the range hood is used in conjunction with appliances supplied with energy other than electric, the negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the range hood.
- In the event of damage to the power cable, it must be replaced by the manufacturer or by a qualified technician in order to prevent any risks.·

USE

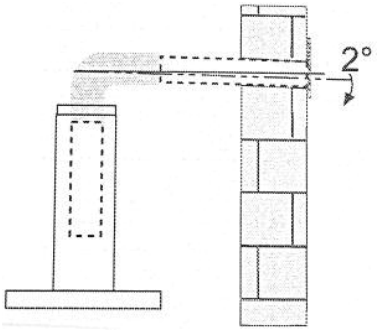

- The range hood has been designed exclusively for domestic use to eliminate kitchen odours.
- Never use the rangehood for purposes other than for which it has been designed.
- Never leave high naked flames under the rangehood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- Do not flame under the range hood; risk of fire.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their well being.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- CAUTION: Accessible parts may become hot when used with cooking appliances.
- If any part of this appliance is cracked, broken or otherwise damaged, usage should immediately be discontinued, the mains power supply disconnected, and a suitably qualified technician should inspect the appliance to determine its safety or otherwise prior to any further usage.
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
- There is a fire risk if cleaning is not carried out in accordance with the instructions
- Do not flame under the range hood.
- CAUTION: Accessible parts may become hot when used with cooking appliances.
- Extension sockets are forbidden.
- Please cut off the power before maintenance.
- This appliance has been designed for home use only, and may cause danger if used in other situations.

MAINTENANCE

- Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
- Clean and/or replace the Filters after the specified time period (Fire hazard).
- Clean the hood using a damp cloth and a neutral liquid detergent.

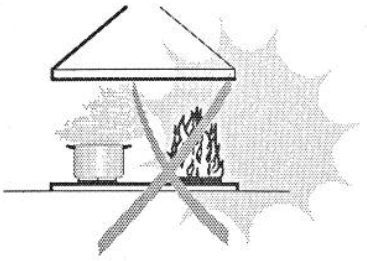

The symbol on packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

COMPONENTS

Ref.	Qty.	Product Components
1	1	Hood Body,complete with: Controls, Light, Blower,Filter.
2.1	1	Lower Decorative Chimney
2.2	1	Upper Decorative Chimney
3	2	The Activated Charcoal filter (optional)

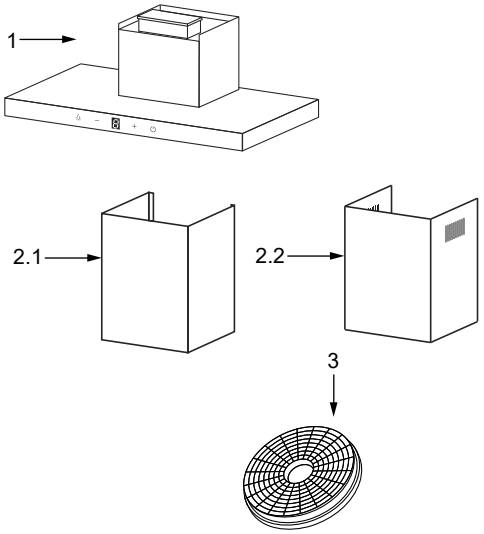

	Qty.	Documentation
	1	User Manual

Ref.	Qty.	Installation Components
10	7	Screws 5 x 50
11	7	Wall Plugs
12	6	Screws 4,2 x 9,5
20	1	Hood fixing bracket
21	2	Chimney fixing bracket

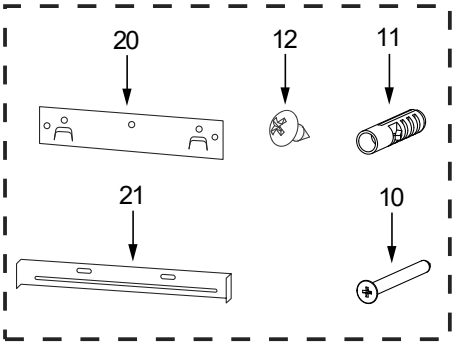

Note: There are appliance specific accessories (eg. screws and brackets) supplied in the carton which should be retained for installation and not discarded with packaging.

INSTALLATION

NOTE: Before making preparations for or commencing installation, the installer should refer to the current online version of the User Manual, which is available on the Kleenmaid website (see back cover for details).

CHOOSE A VENTING MODE

This rangehood may be installed in one of 2 venting modes - ducted extraction-air mode and recirculation mode. The mode to be used must be decided before installation.

With extraction-air mode, the air is discharged out of the house by a pipe (duct) to be provided by the installer.

When recirculation mode is chosen, the air is purified and discharged into the house through two rows of holes on the adjustable decorative cover.

Note: No attached ducting is needed for recirculation mode, but the activated charcoal or carbon filters must be installed to filter the air. In this mode the suction power may be slightly lower.

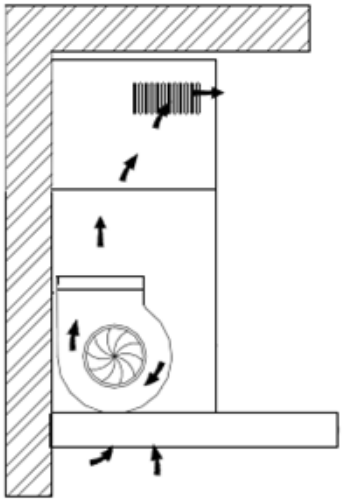

Recirculation mode

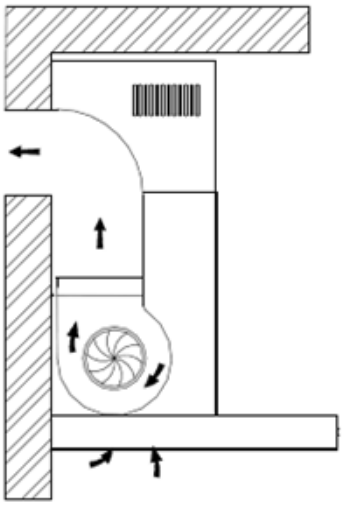

Extraction-air mode

Note: This appliance comes with a 10A plug and cord ready to plug in and use.

⚠ WARNING: IT MUST BE ENSURED THAT THIS APPLIANCE IS CONNECTED ONLY TO A 230VAC +10%/-6% 50Hz MAINS POWER SUPPLY WHICH CONTINUOUSLY COMPLIES WITH THE RELEVANT AUSTRALIAN STANDARD. FAILURE TO DO SO MAY SERIOUSLY DAMAGE THE APPLIANCE AND ANY SUCH DAMAGE IS NOT COVERED BY THE MANUFACTURER'S WARRANTY. ⚠

DIMENSIONS

unit：mm

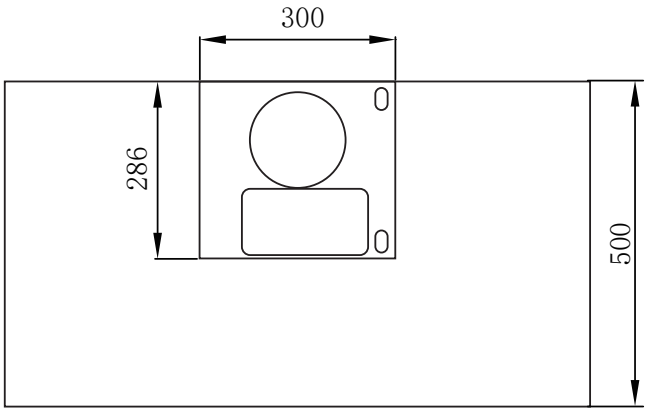

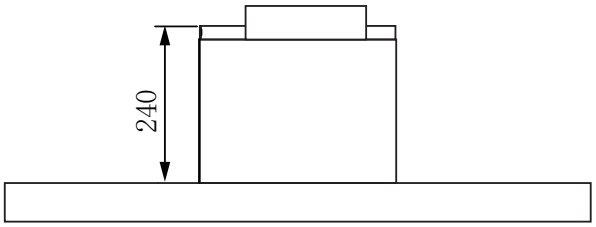

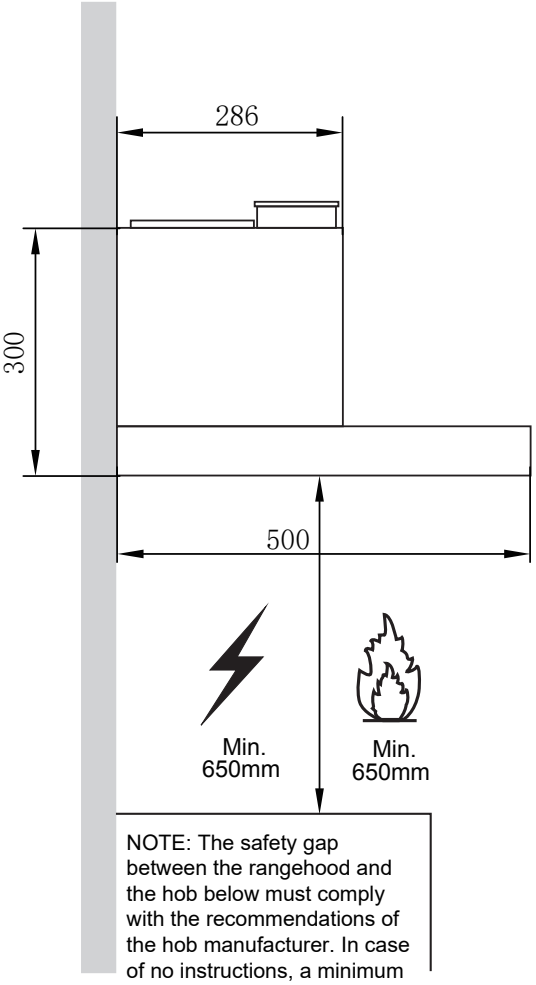

NOTE: The safety gap between the rangehood and the hob below must comply with the recommendations of the hob manufacturer. In case of no instructions, a minimum distance of 650mm (or other minimum distance as may be specified by AS/NZS 5601 and interpreted by a certified installer) should apply.

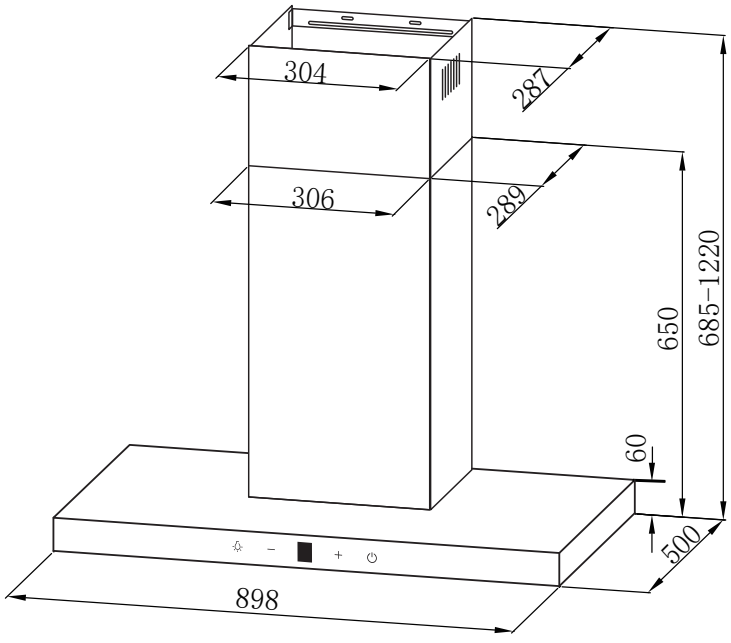

Chimney	A	B	Height
600+590	650	685-1220	650-1220

INSTALLATION

WALL DRILLING AND BRACKET FIXING

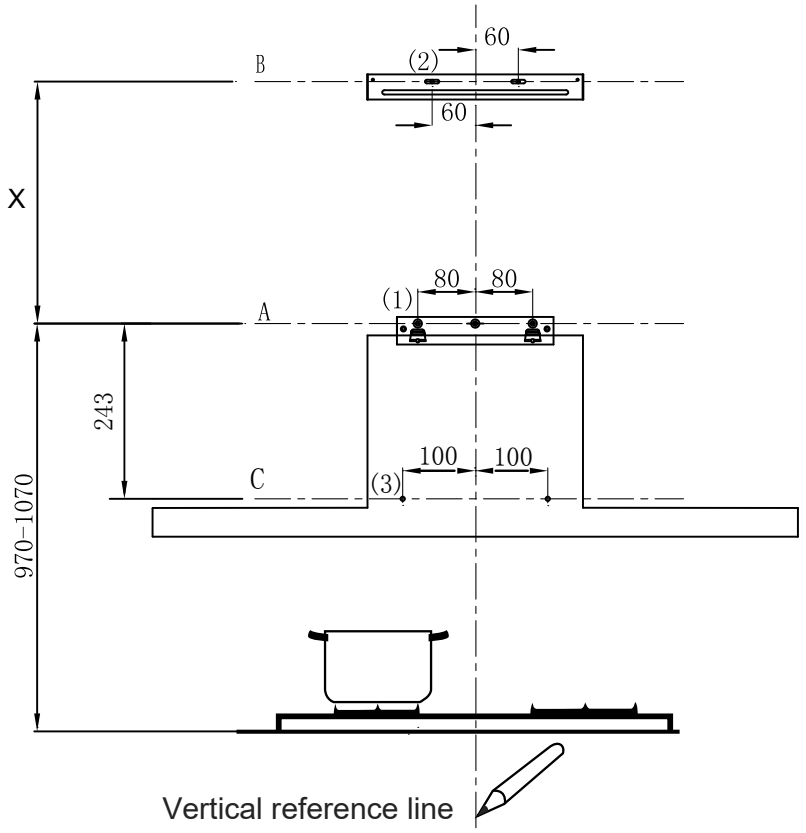



(only apply for upper decorative chimney)



Chimney	X
600+590	360-900

As a first step, proceed with the following drawings:

- A vertical line up to the ceiling or up to the upper limit, at the center of the area in which the hood is to be fitted.
- A horizontal line **A** at **970 – 1070** mm above the cooker top.
- A horizontal line **B** at a **X** mm above the horizontal line **A**.
- A horizontal line **C** at a 243 mm below the horizontal line **A** .

Mark Points:

- Mark a point **(1)** on the horizontal line **A**, **80** mm to the vertical reference line.
- Repeat this operation on the other side and on the vertical reference line, checking that the three marks are leveled.
- Mark a point **(2)** on the horizontal line **B**, **60** mm to the vertical reference line. (only apply for upper decorative chimney)
- Repeat this operation on the other side, checking that the two marks are on the same horizontal line.
- Mark a point **(3)** on the horizontal line **C**, **100** mm to the vertical reference line **.** Repeat this operation on the other side , checking that the two marks are leveled.

Fix the brackets :

- Drill holes at the marked points with a ϕ10 mm drill bit.
- Insert the Wall Plugs **11** into the holes.
- Fix the hood fixing bracket **20** with 3 screws **10** (5 x 50) at the horizontal line **A.**
- Fix a Chimney fixing bracket **21** with 2 screws **10** (5 x 50) at the horizontal line **B**。(Only apply for upper decorative chimney)

Lower decorative chimney

- Fix the 150mm diameter smooth wall rigid exhaust pipe (not supplied) on the hood body, connect chimney and hood body with 2 screws **12**. Connect chimney fixing bracket and chimney with 2 screws **12**.

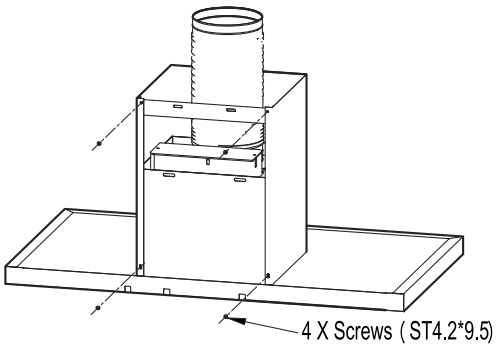

Hook the hood body

- Hook the hood body to the bracket **20**.
- Level the hood body itself.
- Remove the filter from the inside of the hood body, fix the screws **10** to Wall Plugs **11** at the points (3).

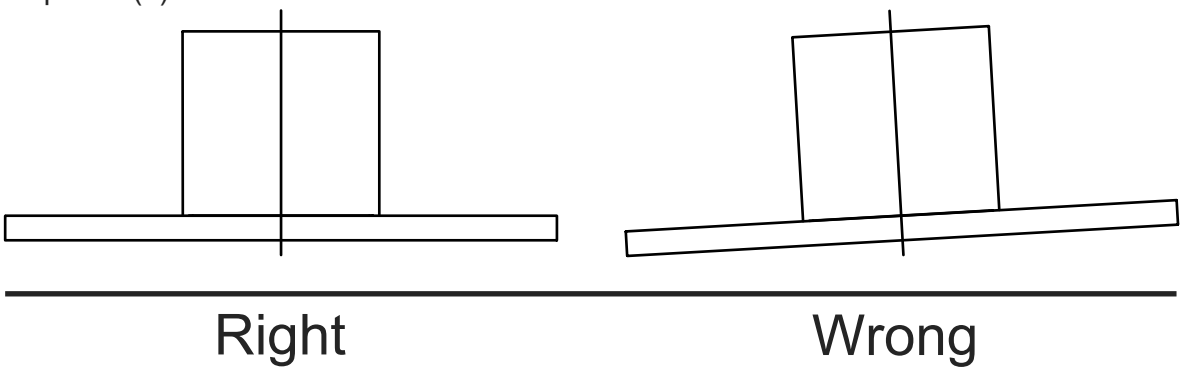

CONNECTIONS

DUCTED VERSION AIR EXHAUST SYSTEM

When installing the ducted version, connect the rangehood to the chimney using smooth wall rigid 150mm diameter ducting pipe (not supplied).

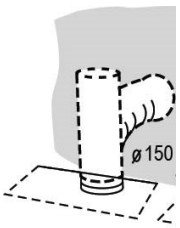

- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Remove any installed charcoal filters.

The maximum recommended overall ducting path to the outside of the building (for 150mm diameter smooth-walled, rigid pipe only) is 10m, reduced by 2.5m for each 90’ bend in the ducting path.

Upper Decorative Chimney (Only apply for upper decorative chimney.)

- Insert the upper decorative chimney **2.2** into the lower decorative chimney **2.1** and drag it up to the horizontal line B
- Connect upper decorative chimney **2.2** and chimney fixing bracket **21** with 2 screws **12** .

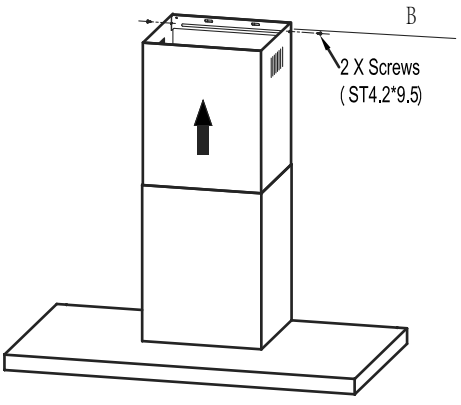

Speed adjustment.

Note: When first plugged into a powered electrical socket the rangehood beeps once and all key lights flash to indicate it is connected to the electrical supply. When the rangehood is powered-on:

- **Power Key:** This controls the motor power. When the rangehood is in the standby state, press the “power” button. The “power” key light illuminates, the motor starts up at low speed, and the digital screen displays setting 1. When the rangehood is in the power-on state and the “power” button is pressed, the rangehood enters a 3-min-delay-shutdown state. The setting switches to low speed, and the power key flashes at one second intervals, indicating the rangehood has entered the delay-shutdown state. During the delay-shutdown state, pressing the “power” button will shut down the appliance immediately and the motor stops running.
- **Light Key:** This independently controls the light, switching it on and off free from the effect of other keys. Press it once, the light turns on and the light key illuminates. Press it again to turn the light off. The light turns off and light key is no longer illuminated.
- **Plus (+) Key:** When the rangehood is in the power-on state power-on state, pressing the "plus (+) key" once will increase the motor speed by one setting and the corresponding setting will show on the digital display. When the "plus (+) key" is pressed, the "plus (+) key" light is illuminated. When the highest setting is reached, the key touch sound may be heard but the setting no longer changes.
- **Minus (-) Key:** When the rangehood is in the power-on state, pressing “minus (-) key" once will decrease the motor speed by one setting, and the corresponding setting will show on the digital display. When the “minus (-) key" is pressed the “minus (-) key" light is illuminated. When the lowest setting is reached, the key touch sound may be heard but the setting no longer changes.

MAINTENANCE

Your Kleenmaid appliance has been engineered and constructed to provide you with years of reliable service by way of its sophisticated components and quality finishes. In return, regular maintenance, in accordance with the following instructions, is required in order to allow it to continue serving you, with its appearance and performance, as well as it did on the day it was first installed.
Please take some time carefully to review this maintenance guide, paying particular attention to periodic and pre-use maintenance activities.

FILTERS

Your Kleenmaid rangehood has one or both the following types of filters:

1.The visible aluminium grease filters, which should be present on every rangehood.

CLEANING THE GREASE FILTERS

- These filters must be cleaned after every 2 months of operation, or more frequently for particularly heavy usage.
- Operate the latch on the grease filters and remove the filters one by one, pushing them towards the back side of the rangehood unit and simultaneously pulling downwards.
- These filters may be cleaned either with a soft-bristled brush in warm soapy water, or in a dishwasher (without other items).
- Any kind of bending of the filters should be avoided when washing them. Before fitting them back into the rangehood make sure that they are completely dry. (The colour of the filter surface may change over time but this has no effect on filter efficiency).
- When fitting the filters into the rangehood make sure that they are mounted in the correct position with the handle facing outwards, and latch securely.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.

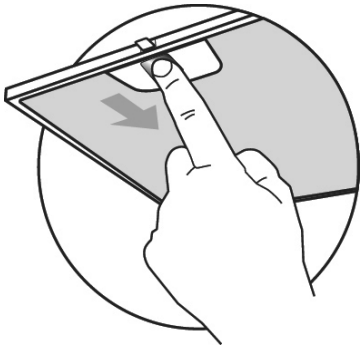

Normally these filters will last the life of the rangehood, however if they are damaged in any way, replacements may be purchased by visiting our website www.kleenmaid.com.au, emailing support@kleenmaid.com.au or calling 02 9310 1207.

2. The internal Kleenmaid Activated Charcoal (or “Carbon”) Filters, which should be fitted to a rangehood installed in recirculating mode i.e. not vented outdoors.

These filters are located inside the rangehood and remove cooking odours from the air. They cannot be cleaned and will require replacement. The effective life of the filter depends on the type and amount of cooking you do. Generally the life of these filters is approximately four months. However, always replace the filter when it no longer absorbs odours effectively.
When replacement Activated Charcoal filters are required they may be purchased by visiting the Kleenmaid website www.kleenmaid.com.au. Order code KMCF200

REPLACING THE ACTIVATED CHARCOAL FILTERS

- Remove the metal grease filters
- Remove the saturated activated charcoal filter.
- Fit the new filters.
- Replace the metal grease filters.

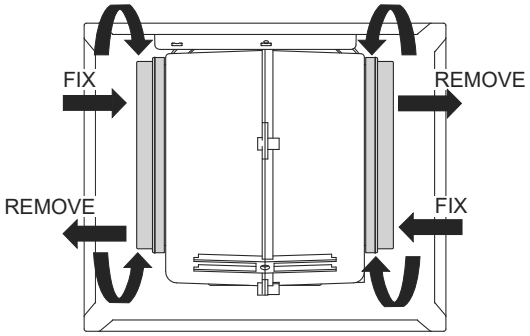

Warning: It must be ensured that the filters are correctly installed whenever the rangehood is operating. Failure to do so may damage the rangehood, and such damage will not be covered by the manufacturer's warranty.

CLEANING THE RANGEHOOD

Clean the rangehood regularly using a damp cloth and a neutral liquid detergent.

Warning: Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.

LIGHTING

LIGHT REPLACEMENT (**To be completed by professionals**)

Replacing the light modules

- The light bulbs cannot be replaced. The entire light module has to be replaced.
- When changing the light modules, the contacts are live.
- Before changing the light module(s), unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

- Remove the grease filter and carefully remove the 2 screws from the front plate (a Philips head screwdriver will be needed to remove the screws).
- Disconnect the terminal of LED light.
- Press LED light on the back of the front plate, take the LED light out.
- Replace the lamp (commercially available LED lamp - max.1.5W).

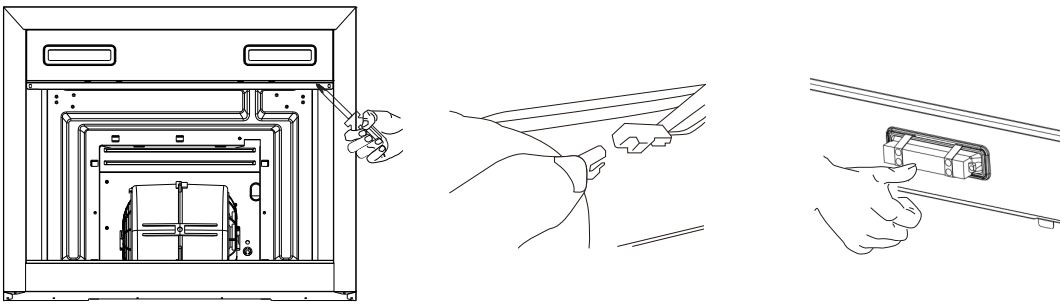

Lamp type	Max Power	Voltage	Picture	Lamp Cap	ILCOS D code
LED modules, separate ballast	1.5W	DC 12 V	 Square / Dimesion: 33.2mm x 120mm	——	DSS-1.5-S-33.2 /120

- Press LED light on the front of front plate, install the LED light on the front plate.
- Connect the terminal of LED light and light leads.
- Carefully fasten the 2 screws on the front plate, reinstall the grease filter.

TECHNICAL SPECIFICATIONS

Voltage	220-240V~ 50Hz
Rated Power	293W
Lighting	2x1.5W
Motor Input Power	290W
Standby Power Consumption	0.5W
Diameter of air outlet	150mm
Air flow	Max 1150m ^{3}/h (air flow meter)
Noise at lowest speed	63dB(A)

TROUBLE SHOOTING

Fault	Cause	Solution
Light on, but motor does not work	The blades are blocked.	Check the blades.
	The capacitor is damaged.	Contact Service Department
	The motor is damaged.	Contact Service Department
	The internal wiring of motor is cut off/ disconnected. An unpleasant smell may be produced.	Contact Service Department
Both light and motor do not work	Apart from the above mentioned, check the following:	
	Light damaged.	Replace lights.
	Power cord loose.	Contact Service Department
Oil leakage	Outlet and the air ventilation entrance are not tightly sealed.	Seal the duct connection with appropriate sealant.
Vibration	The blade, if damaged, can cause vibrating.	Contact Service Department
	The motor is not tightly fastened.	Contact Service Department
	The rangehood is not tightly fixed.	Fix the rangehood tightly.
Insufficient suction	The distance between the range-hood and the cooktop is too large.	Readjust the distance. according to installation instructions.
	Too much ventilation from open doors or windows.	Choose a new place to install the appliance or close some doors / windows.
The appliance inclines	The fixing screws are not tight enough.	Tighten the fixing screw and make it horizontal.
	The hanging screws are not tight enough	Tighten the hanging screw and make it horizontal.

If the appliance fails to operate correctly during the warranty period please visit our website to request a warranty service (see back cover of this manual for details). When booking a service please provide your Model No: RHSCK92, and the individual Serial Number of your rangehood from your appliance paperwork. It is also on the rating plate attached to the motor cover, visible when the grease filters are removed. See page 10 for grease filter removal instructions, after ensuring the rangehood is disconnected from the power supply.

KLEENMAID WARRANTY

TERMS AND CONDITIONS

1. Compass Capital Services Pty Ltd ABN 96 138 214 525 trading as Kleenmaid will provide parts and labour to you the customer as set out herein.
2. Kleenmaid may engage a Service Agent to provide service under this warranty.
3. Kleenmaid's Products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
4. The benefits given to you under this Kleenmaid Warranty are in addition to other rights and remedies to which you may be entitled under the Australian Consumer Law in relation to the Product to which this Kleenmaid Warranty relates. Subject to the conditions below, the Product is warranted by Kleenmaid and/or its agents to be free from defects in materials and workmanship for the Warranty Period for normal Domestic Use.
5. Product Identification: -
    a. Kleenmaid reserves the right to reject claims for any services or work where you cannot produce for verification the serial number and a proof of purchase for the Product (including but not limited to the original invoice).
    b. this Kleenmaid Warranty will be voided if the serial number for the Product cannot be verified. This is not intended to exclude, restrict or modify any right or remedy to which you may otherwise be entitled under the consumer guarantee provisions of the Australian Consumer Law.
    c. in the event that a request for repair is made against this Kleenmaid Warranty where the serial number for the Product cannot be verified or you cannot produce for verification a proof of purchase for the Product (including but not limited to the original invoice), the repairer will not carry out any repairs on the Product and you will be charged a service call-out fee.
6. What is covered by this Kleenmaid Warranty: -
    a. the Product is covered for faulty workmanship or parts that have failed under normal Domestic Use.
    b. Kleenmaid and/or its agents will determine by objective testing if there are any defects in the Product and/or faulty workmanship.
    c. this Kleenmaid Warranty is only applicable if repairs on Products are carried out within Mainland Australia.
    d. this Kleenmaid Warranty: -
        i. covers a Product purchased as new, manufactured for use in Mainland Australia;
        ii. commences from the date of delivery of the Product;
        iii. provides for the labour and replacement parts necessary to maintain the Product in good operating condition as specified in this Kleenmaid Warranty, however, if repair is needed because of Product failure during normal Domestic Use, Kleenmaid has the option to repair or replace the defective Product or part of the Product with a product or part of like kind and quality. A replacement part may be new or reconditioned of like kind and quality and may cost less than the original Product purchased and no charges or refunds will be made based on the replacement product or part cost difference; and
        iv. is only applicable when the Product is used and operated in accordance with the Manufacturer's instructions.
7. What is not Covered by this Kleenmaid Warranty (excluded):-
    a. any damage or failure to or of the Product or part of the Product:
        i. due to the Product being inadequately serviced to manufacturer's recommendations;
        ii. resulting from environmental conditions including and not limited to dirt, dust, rodents, insects, rust, corrosion, salt built-up, of or in any part of the Product;
        iii. resulting from excessive use but fair wear and tear is excepted;
        iv. resulting from installation by an unqualified or uncertified tradesperson;
        v. resulting from poor or incorrect installation including and not limited to positioning and externally fitted equipment such as plumbing and drainage, cabling, antennae or due to incompatibility of connected equipment;
        vi. caused by overheating as a result of sitting or positioning of the Product, where there is no provision for adequate ventilation or adequate protection from excessive dust;
        vii. if the Product has been dismantled, repaired or serviced by any person other than someone authorised by Kleenmaid or its agents or representatives;
        viii. caused by power surges or spikes, including but not limited to, mains power and telecommunications connections, or to other unspecified sources, incorrect power current, voltage fluctuation, amperage fluctuation, rust or corrosion;
        ix. caused by the water supply to the Product not being compatible with the input requirements as specified in the installation instructions including but not limited to, insufficient or excessive water pressure or non-potable water supply;
        x. if the Product is dropped, collision of the Product with another object, use for which the Product is not designed, damage to the Product caused by your own negligence, accidental or deliberate misuse of the Product by you, theft, abuse, vandalism, flood, fire, earthquake, electrical storms or any other act of God or any war related events; or
        xi. due to the introduction of abnormal heat loads to the Product;
    b. costs of attendance and testing where no fault or defect covered by the terms of this Kleenmaid Warranty is identified in the Product;
    c. initial setup and installation of the Product;
    d. cost of uninstalling or re-installing the Product if it has been connected to its power supply via fixed mains wiring and not via the supplied plug and cord assembly (where applicable);
    e. normal maintenance costs and costs incurred through the installation of items listed as requiring periodic replacement;
    f. Products with removed or altered serial numbers;
    g. broken or cracked glass other than transport damage to the initial point of delivery;
    h. consumables such as but not limited to bulbs/globes, seals, filters, batteries and remote controls;
    i. removal and reinstallation of an internal component not performed by an authorised Kleenmaid agent or representative or authorised service centre;
    j. cosmetic or structural items; or
    k. any failures due to interference from or with other products and/or sources.
8. This Kleenmaid Warranty ceases if: -
    a. the Product ceases to carry the original manufacturer's serial number or is sold at an auction;

b. the Product is rented; or
c. there is failure to pay monies owing on invoices as a result of non-warranty work being carried out at the request of the end user as per point 16 below.

9. Service under this warranty may be limited by the area in which you live. Service to remote and regional areas may incur additional travel costs which will be payable by you or you may be required to return the Product to an authorised service agent. You will be advised of this at the time you make a claim and Kleenmaid arranges to attend your premises.
10. Neither Kleenmaid nor its representatives provide loan equipment under the terms of this Kleenmaid Warranty.
11. Any unauthorised access to the internal hardware of the Product will void this Kleenmaid Warranty.
12. Repair Notice: Products presented for repair may be replaced by refurbished Products of the same type rather than being repaired. Refurbished parts may be used to repair the Products.
13. Replacement items are “like for like” and is not “new for old” and does not indicate in any way that a faulty Product will be replaced with a new part or unit. “Like for like” may either be a quality checked, refurbished or reconditioned unit of the same or later batch of model/size/specifications
14. The cost of making a claim under this Kleenmaid Warranty is not covered by Kleenmaid, including any costs of transportation or travel expenses between your home and your nearest authorised service agent.
15. Kleenmaid accepts no liability for items that are lost, damaged, or stolen as a result of freight, transport or storage. If you are required to transport the Product to an authorised service centre, you must ensure that it is securely packed and insured.
16. On Public Holidays or other periods when regular business and wholesale operations are temporarily ceased, repairer availability and warranty response times may extend beyond the standard response times due to the unavailability of repairers and parts.
17. For any repair performed on a Product under this Kleenmaid Warranty where no fault can be found, or the item is deemed by Kleenmaid or an authorised agent, to be not faulty under this Kleenmaid Warranty, or the repair or fault is not covered under this Kleenmaid Warranty, a ‘No Fault Found’ fee is payable by you. Kleenmaid will advise you of this cost and seek your agreement to pay such costs before commencing such repairs.
18. Any repairs or services required that are outside the terms and conditions of this Kleenmaid Warranty can be carried out at your request at your cost (including where the Product has not been installed or set up correctly). Kleenmaid will always advise you of this cost and seek your agreement to pay such costs before commencing such repairs. A credit card may be required prior to the commencement of such services.
19. Extra charges will be payable by the customer should the Product not be readily accessible without special equipment, such as but not limited to cranes and lifts or should the Product be installed in a position that service access is blocked and/or repair work is not possible without uninstalling the Product to gain access.
20. You, the customer, may be entitled to purchase an extended warranty in respect of the Product. Any extended warranty will not be issued by Kleenmaid but by a third party. Any extended warranty services will be provided directly by the third party as principal and not as agent for Kleenmaid, under their extended warranty terms and conditions and not under this Kleenmaid Warranty.
21. To make a claim under this Kleenmaid Warranty, please have your proof of purchase and the serial number of the Product ready and visit the website kleenmaidwarranty.com.au or call (02) 9310 1207 during business hours.
22. This Kleenmaid Warranty is given by:
    Name: Compass Capital Services Pty Ltd ABN 96 138 214 525 trading as Kleenmaid
    Business address: Level 2, Suite 3, 204 Botany Rd, Alexandria NSW Australia 2015
    Telephone: (02) 9310 1207
23. Definitions:
    a. **Australian Consumer Law** means the *Competition and Consumer Act 2010* (Cth).
    b. **Domestic Use** means use of the Product for personal, domestic or household purposes.
    c. **Kleenmaid** means Compass Capital Services Pty Ltd ABN 96 138 214 525 trading as Kleenmaid.
    d. **Mainland Australia** means the following States and Territories of Australia: New South Wales, Victoria, South Australia, Western Australia, Queensland, Tasmania, Northern Territory, Australian Capital Territory.
    e. **Product** means the appliance sold by Kleenmaid to you as evidenced by the original purchase invoice.
    f. **Service Agent** means any independent service agent engaged by Kleenmaid to carry out any repair or service under this warranty.
    g. **Warranty Period** means the period of 60 months or such period as agreed in writing at the time of sale.

UPDATE NOTICE: This Kleenmaid Warranty is current as at 5 March 2025 but is subject to variation from time to time. For the latest version please see our website kleenmaid.com.au/warranty/ or phone us on (02) 9310 1207.

Other products available in the Kleenmaid range of appliances

- Washing machines
- Clothes dryers
- Dishwashers
- Ovens
- Cooktops
- Steam ovens
- Microwave ovens
- Built in espresso coffee machines
- Rangehoods
- Freestanding ovens
- Refrigerators & Freezers
- Beverage Serving Cabinets
- Water Dispensers
- Vacuum Cleaners

To register your warranty or make a warranty claim, scan this QR code:

Compass Capital Services Pty Limited
trading as Kleenmaid
ABN 96138214525

Level 2, 204 Botany Road Alexandria
NSW 2015

Register your Kleenmaid Appliances Warranty
www.kleenmaidwarranty.com.au

Request a Warranty Service
www.kleenmaidwarranty.com.au

E: warranty@kleenmaid.com.au

Please download the current User Manual for this appliance at www.kleenmaid.com.au