



# LWK330 IRONING CENTRE COLLAR

## COMPONENTS

The LWK330 Ironing Centre Collar is designed to fit a surface mounted Ironing Centre.

Collar Kit contains:      Installation kit contains:  
 (A) two Collar Sides.      (D) two Edge Covers.  
 (B) Collar Top.              (E) eight Screws 6" x 1/4"   
 (C) Collar Bottom.        (F) six Screws 8" x 3/4"   
 (G) Edge Saddle

## PRELIMINARY INSTRUCTIONS

PLEASE READ THE ENTIRE INSTRUCTIONS BEFORE ASSEMBLING THE COLLAR KIT



### WARNING

THE TWO EDGE COVERS (D) MUST BE INSTALLED TO THE FLEXI-IRON BEFORE ASSEMBLING THE COLLAR KIT TO PREVENT ELECTRICAL HAZARD.

- Clip the Edge Covers (D) into position (See dia. 1).
- Follow the Ironing Centre Installation Instructions to mount the Ironing Centre to the wall.

Note: Please allow 100mm clear area on either side of Ironing Centre for the Collar installation.  
 (Alternatively install the Collar to the Ironing Centre before installing to the wall)


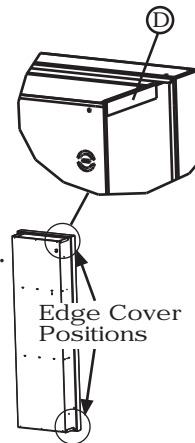


Diagram 1.

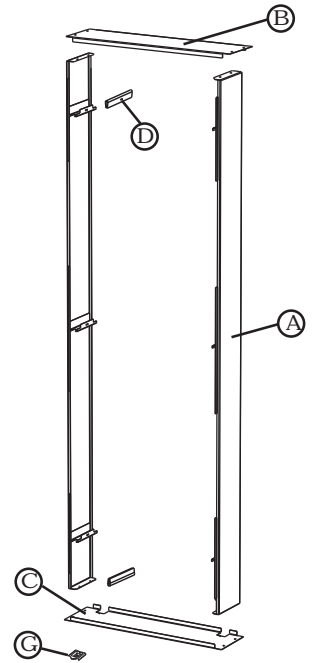

## COLLAR ASSEMBLY

Note - this collar is interchangeable to allow the powercord to exit at either the top or bottom of the unit. Just swap part (B) with part (C) during installation and take note of powercord route.

Instructions for fitting the collar with power exiting at the bottom.

- Remove the wireway cover (dia. 3).
- Run the powercord through the brackets of the Collar Side (A) (dia. 2).
- Position Collar Side (A) to the Flexi-Iron and swing into place (dia. 3).
- Screw Collar Side (A) in place from inside using three screws supplied (F).
- Repeat for second side.
- Place Collar Top (B) on top of unit and line up holes.
- Screw Collar Top (B) in place using four screws supplied (E).
- Slide Edge Saddle (G) into Collar Bottom (C) to protect the powercord (dia. 4).
- Pass the powercord through the Edge Saddle.
- Position Collar Bottom (C) in place on the bottom of the ironing centre and align holes.
- Screw collar bottom (C) in place using four screws supplied (E).
- Refit the Wireway Cover.

RUN THE POWERCORD THROUGH THE BRACKET

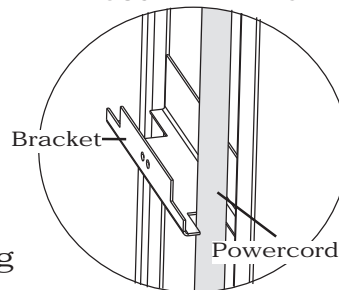


Diagram 2.

EDGE SADDLE POSITION

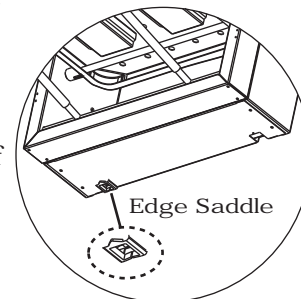


Diagram 4.

SWING CLOSED COLLAR SIDE

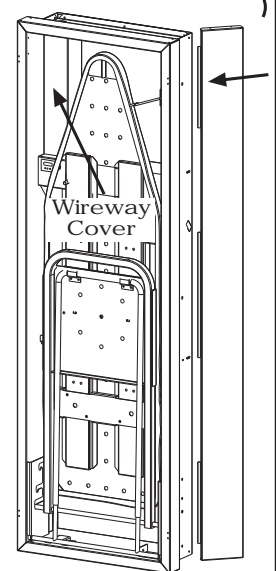


Diagram 3.

MANUFACTURED FOR:

 **Kleenmaid**

BY:

ROBINHOOD LIMITED  
 6 ZELANIAN DRIVE, EAST TAMAKI  
 AUCKLAND, NEW ZEALAND  
 ISO9001 Certified

107844 issue "A"  
 ECN: 04053