


## SA1SD MODERNA LIQUID SOAP DISPENSER

**Installation:** Either use an existing hole or prepare one specially. The hole should be 30mm diameter. It is recommended that the centre of the hole should be no more than 100mm from the inside edge of the basin or sink. When choosing a location remember to consider any obstructions underneath the surface. (See fig.i)

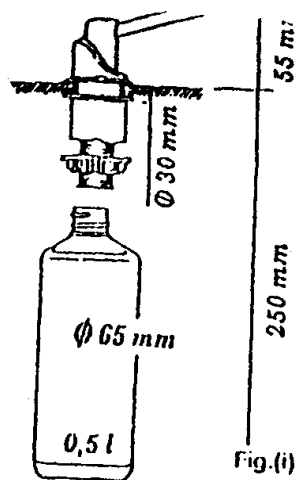

Pass the washer then the spacer (unless the surface thickness exceeds 25mm) over the connector and then screw on the nut, finger tight from beneath. Push the bottle over the four lugs at the bottom of the connector, until it clicks into position. Push the dip tube ("MAX" mark at the top) into the pump.

Fill the bottle (500ml) through the connector assembly and pass the head assembly down into the connector. You can use the dip-tube as a measure of how full the bottle is.